



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2142	6228A	1 COWL ASSEMBLY (STARBOARD)	1		
2	26	60297	SEAL, FUEL CONNECTOR-COW	1		
3	2141	6227A	1 COWL ASSEMBLY (PORT)	1		
4	26	60298	SEAL, CONTROL CABLES-COW	1		
5		69566	BRACKET, COWL SEALING-REAF	1		
6		69876	1 SEAL, REAR BRACKET	2		
7		69568	BRACKET, COWL HINGE	2		
8	10	45561	SCREW, HINGE BRACKET TO RE	2		
8	10	75794	SCREW, HINGE BRACKET TO RE	2		
8A		75805	CAP, HINGE BRACKET SCREW (L	2		
9	13	26392	LOCKWASHER, HINGE BRACKET	4		
10	12	37998	WASHER, HINGE BRACKET SCR	4		
10	12	75806	WASHER, HINGE BRACKET SCR	2		
11	17	60301	PIN, COWL HINGE	4		
12	10	28782	SCREW, PIN TO COWL (7/8")	4		
13	13	26393	LOCKWASHER, PIN ATTACHING	4		
14		46785A	2 COWL LATCH ASSEMBLY	2		
15		62628	BARREL, COWL LATCH	2		
16	10	31312	SCREW, LATCH ASSEMBLY TO E	2		
17		62627	BAR, ADJUSTMENT-COWL LATC	2		
18		62629	BARREL, COWL LATCH	2		
19	24	62624	SPRING, TENSION-COWL LATCH	2		
20	12	30164	WASHER, ADJUSTMENT BAR TC	2		
21	11	45812	NUT, ADJUSTMENT BAR TO BAF	2		
22	2143	5689A	3 COWL FRONT COVER ASSEMBL	1		
23		75165	BLANKET, SOUND ABSORBING	1		
24		61158	HOOK, COWL FRONT COVER F	2		
25	10	69570	SCREW, FASTENING HOOK TO	1		
26		47341A	1 STARTER ROPE ASSEMBLY (FOR	1		