



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	2986A 3	SWITCH BOX ASSEMBLY, COMPI	1		
2	12	45075	WASHER, SWITCH BOX TERMIN	.7		
3	11	45076	NUT, SWITCH BOX TERMINAL	.7		
4	10	22485	SCREW, SWITCH BOX TO FRON	.4		
5	41	46887	NUT, SWITCH BOX TO FRONT SI	.4		
6	332	2910A 3	RECTIFIER ASSEMBLY, COMPLE	.1		
7	12	45075	WASHER, RECTIFIER TERMINAL	.3		
8	11	45076	NUT, RECTIFIER TERMINAL	.3		
9		46286	JUMPER WIRE, RECTIFIER TO S'	.1	SERIAL 00000000-02208376	
10	10	22485	SCREW, RECTIFIER TO FRONT S	.2		
11	11	46887	NUT, RECTIFIER TO FRONT SUF	.2		
12		46280	BRACKET, RETAINER - HIGH TEI	.1		
13	10	21722	SCREW, RETAINER BRACKET TI	.1		
14	11	46887	NUT, RETAINER BRACKET SCRE	.1		
15	50	45822A 1	STARTER MOTOR ASSEMBLY	1.1		
16	13	26992	LOCKWASHER, STARTER MOTO	1.1		
17	11	20890	NUT, STARTER MOTOR TERMIN	1.1		
18	10	22698	SCREW, STARTER MOTOR TO C	2.2		
19	13	26993	LOCKWASHER, STARTER MOTO	2.2		
20		37331	PLATE, SPACER - STARTER MOT	1.1		
21		38747	BRACKET, SUPPORT - STARTER	1.1		
22	13	24669	LOCKWASHER, THRU BOLT - BR	2.2		
23	11	20088	NUT< THRU BOLT - BRACKET TC	2.2		
24		25596	WIRE, STARTER MOTOR TO STA	1.1		
25	10	29197	SCREW, GROUND WIRE TO STA	1.1		
26	13	26992	LOCKWASHER, GROUND WIRE I	1.1		
27		46287	GROUND STRAP ASSEMBLY	1.1		
28		32445	STARTER SOLENOID	1.1		
29	13	26996	LOCKWASHER, SOLENOID TERN	2.2		
30	11	20645	NUT, SOLENOID TERMINAL (#10	2.2		
31	13	26993	LOCKWASHER, SOLENOID TERN	2.2		
32	11	20083	NUT, SOLENOID TERMINAL - INS	2.2		
33	10	31208	SCREW, STARTER SOLENOID TI	2.2		
34		46272	WIRING HARNESS (INTERNAL)	1.		
34		46288	WIRING HARNESS (INTERNAL)	.1	SERIAL 00000000-02208376	
34		46985	WIRING HARNESS (INTERNAL)	.1	SERIAL 02208377-09999999	
35	24	28975	SPRING, GARTER - INTERNAL W	1.1		
36		26079	PLATE, BACKING - WIRING HAR	1.1		
37	10	45893	SCREW, BACKING PLATE TO BO	4.4		
38	10	20776	SCREW, WIRING HARNESS LEA	.1		
39	132	24669	LOCKWASHER, WIRING HARNE	1		