



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	3617	COWL, BOTTOM	1	SERIAL #2803562-#2869698	
1	2115	3926A 2	COWL, BOTTOM	1	SERIAL #2869699-09999999	
2		52862A 1	DRIP TRAY ASSEMBLY, BOTTOM	1		
3		37940	PAD, SOUND - DRIP TRAY	1		
4		37903	FLANGE, RUBBER - DRIP TRAY	1		
5	10	35519	SCREW, DRIP TRAY TO BOTTOM	4		
6	32	34395A 1	HOSE, DRIP TRAY TO BOTTOM	1		
7		37638	BOOT, CONTROL CABLES - BOT	1	SERIAL #2803562-#2869698	
7		39616	BOOT, CONTROL CABLES - BOT	1	SERIAL #2869699-09999999	
8		23760	BAFFLE, BOTTOM COWL	1		
9	10	52867	SCREW, BAFFLE TO BOTTOM CC	3		
10		37637	BOOT, FUEL CONNECTOR - BOT	1		
11		37445	SUPPORT, WIRING HARNESS - E	1		
12	10	37561	SCREW, WIRING HARNESS SUP	1		
12	10	37990	SCREW, WIRING HARNESS SUP	1		
13	11	46887	NUT, WIRING HARNESS SUPPO	2		
14	32	34395A 1	HOSE, TELL TALE - EXHAUST CC	1		
15		52889	NOZZLE, TELL TALE HOSE TO B	1		
15A	22	25885	ELBOW, TELL TALE HOSE TO EX	1		
16	10	34222	SCREW, TELL TALE NOZZLE TO	1	SERIAL #2803562-#2869698	
16	10	35519	SCREW, TELL TALE NOZZLE TO	1	SERIAL #2869699-09999999	
17	27	47257	GASKET, POWERHEAD TO EXH	1		2.4
18		56306A 2	PLATE ASSEMBLY, EXHAUST EX	1		*
19	26	38970	SEAL, RUBBER - WATER INLET	1		2.4
20		38448	RETAINER, WATER TUBE SEA	1		
21	10	34439	SCREW, RETAINER TO EXTEN	1		
22	10	24226	SCREW, EXTENSION PLATE TO	1		
23	11	46887	NUT, EXHAUST EXTENSION PLA	1		
24	27	48801	GASKET, EXHAUST EXTENSIONS	1		2.4
25		37918	SEAL, EXHAUST EXTENSION PL	1		
26		38032	STRIP, RETAINING - EXHAUST E	1		
27	10	37571	SCREW, SEAL AND STRIP TO EX	5		
28		53889A 4	SHIFT SHAFT ASSEMBLY, UPPE	1		
28		53889A 3	SHIFT SHAFT ASSEMBLY, UPPE	1		
29		55692	COUPLING, SHIFT SHAFT	1		
30	23	26600	BUSHING, NYLON - UPPER SHI	1		
31		48047A 1	LINK ROD ASSEMBLY	1		
32	12	24664	WASHER, LINK ROD (SHIFT LEV)	1		
33	13	29720	WASHER, WAVE - LINK ROD	1		
34		47869A 1	BRACKET ASSEMBLY, ANCHOR	1	SERIAL #2803562-#2869698	
35		28902	CAP, BRASS BARREL OF THRC	1	SERIAL #2803562-#2869698	