



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	30	20066	BALL BEARING, DISTRIBUTOR H	1		
2	11	54209	NUT, ROTOR SHAFT TO DISTR	1		
3	23	53539	SLEEVE, ROTOR SHAFT	1		
4	332	4177A 3	HOUSING ASSEMBLY, DISTRIBU	1		
5		53417	GROUND STRAP ASSEMBLY, DI	1		
6	10	30663	SCREW, GROUND STRAP ATTA	1		
7	22	55262	ELBOW, VENT - DISTRIBUTOR H	1	SERIAL #2803562-02874263	
7		58807A 1	FLAME ARRESTOR ASSEMBLY, I	1	SERIAL 02997339-09999999	
8	15	55853	SHIM, BEARING TO DISTRIBUTO	AR		
9	30	26379	BALL BEARING, DISTRIBUTOR H	1		
10	15	21148A 1	SHIM, BEARING TO SPACER	1		
11	23	53538	SPACER, ROTOR SHAFT	1		
12	53	26406	RING, RETAINING - BALL BEARIN	1		
13	393	3236	DISC, ROTOR	1		
14	393	3896	ROTOR, DISTRIBUTOR	1	SERIAL #2803562-#2874263	
14	393	4370	ROTOR, DISTRIBUTOR	1	SERIAL #2997339-09999999	
15	54	55651	CLAMP, DISTRIBUTOR CAP TO C	1		
16	10	54281	SCREW, DISTRIBUTOR CAP CLA	1		
17	11	26768	NUT, DISTRIBUTOR CAP CLAMP	1		
18	32	34395A 1	HOSE, VENNT - DISTRIBUTOR T	1	SERIAL #2803562-02874263	
18	32	34395A 1	HOSE, VENT - DISTRIBUTOR TO	1	SERIAL #2803562-02874263	
19	22	31521	ELBOW, VENT HOSE TO BOTTO	2	SERIAL #2803562-02874263	
20	393	3294A 1	HIGH TENSION CALBE ASSEMBL	1		
21	25	26547	GROMMET, HIGH TENSION CA	1		
22	332	2854	BOOT, HIGH TENSION CABLE	1		
23	393	1275	SLEEVE, HIGH TENSION CABLE	1		
24	32	46398	SLEEVE, (LEADS 1, 2, 3, 4) - (3/4"	1		
25		45391	SPACER, IGNITION WIRE	1		
26	27	55896	GASKET, DISTRIBUTOR CAP TO	1		
27	393	3726A 2	DISTRIBUTOR CAP ASSEMBLY	1		
28	393	1293A 1	BRUSH AND SPRING ASSEMBL	1		
29	22	31521	ELBOW, VENT - DISTRIBUTOR C	1	SERIAL #2803562-#2874263	
29		58807A 1	FLAME ARRESTOR ASSEMBLY, I	1	SERIAL #2997339-09999999	
30		46281	RETAINER, HIGH TENSION LEAC	4		
31	10	46378	SCREW, HIGH TENSION LEAD R	2		
32	11	20013	NUT, HIGH TENSION RETAINER	2		
33	33	57451	SPARK PLUG (AC V-40FFM)	4		
34		47899A 9	SPARK PLUG LEAD ASSEMBLY #	4	ORDER A-36549A1 KIT FRO REF	
--		20121	CONNECTOR, SPARK PLUG LE	4		
35		47604A 1	PROTECTOR, SPARK PLUG LEA	4		
36	22	26527	SLEEVE, SPARK PLUG LEAD (LE	2		