



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	2986A 8	SWITCH BOX ASSEMBLY, COMPI	1		
2	12	45075	WASHER, SWITCH BOX TERMIN	7		
3	11	45076	NUT, SWITCH BOX TERMINAL	7		
4	10	21625	SCREW, SWITCH BOX TO FRON	4		
5	11	46887	NUT, SWITCH BOX TO FRONT SI	4		
6	332	2910A 3	RECTIFIER ASSEMBLY, COMPLE	1		
7	12	45075	WASHER, RECTIFIER TERMINAL	3		
8	11	45076	NUT, RECTIFIER TERMINAL	3		
9	10	24963	SCREW, RECTIFIER TO BOTTOM	2		
10	13	22773	LOCKWASHER, RECTIFIER MOU	2		
11		46280	BRACKET, RETAINER - HIGH TE	1		
12	10	22956	SCREW, RETAINER BRACKET TI	1		
13	11	46887	NUT, RETAINER BRACKET SCRE	1		
14	50	45822A 1	STARTER MOTOR ASSEMBLY	1	SERIAL #2803562-#2803821	
14	50	57867A 1	STARTER MOTOR ASSEMBLY	1	SERIAL #2803822-#2997338	
14	50	58788	STARTER MOTOR ASSEMBLY	1	SERIAL #2997339-0999999	
15	13	26992	LOCKWASHER, STARTER MOTO	1		
16	11	20890	NUT, STARTER MOTOR TERMIN	1		
17	10	22698	SCREW, STARTER MOTOR TO C	2		
18	13	26993	LOCKWASHER, STARTER MOTO	2		
19		37331	PLATE, SPACER - STARTER MO	1		
20		38747	BRACKET, SUPPORT - STARTER	1		
21	13	24669	LOCKWASHER, THRU BOLT - BR	2		
22	11	20088	NUT, THRU BOLT - BRACKET TO	2		
23		49731	WIRE, STARTER MOTOR TO STA	1		
23		26511	WIRE, STARTER MOTOR TO TOI	1		
24	10	29197	SCREW, GROUND WIRE TO STA	1		
25	13	26992	LOCKWASHER, GROUND WIRE I	1		
26		25661	STARTER SOLENOID	1		
27	10	21625	SCREW, STARTER SOLENOID TI	2		
28	13	26992	LOCKWASHER, STARTER SOLE	2		
29	13	26993	LOCKWASHER, SOLENOID TERM	2		
30	11	20083	NUT, SOLENOID TERMINAL - INS	2		
31	13	26996	LOCKWASHER, SOLENOID TERM	2		
32	11	20645	NUT, SOLENOID TERMINAL (#10	2		
33		46265	BOOT, STARTER SOLENOID TEF	1		
34		52771	WIRING HARNESS (INTERNAL)	1		
35	54	52876	CLAMP, WIRING HARNESS TO B	1		
36	10	45862	SCREW, WIRING HARNESS CLAI	2		
37	13	26996	LOCKWASHER, WIRING HARNE	2		
38	12	20128	WASHER, WIRING HARNESS CL	2		