



BOTTOM COWL AND SHIFT LINKAGE

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2159	6587A 5	COWL, BOTTOM	1		
2	19	95925	PLUG, BOTTOM COWL	3		
3		74360	PLUG, BOTTOM COWL	1		
4		39778	GROMMET, CHOCK SHAFT - BOT	1		
5		66353	COVER, ACCESS HOLE	1		
6		65479	COVER, ACCESS HOLE	1		
7		39474	ANCHOR, LATCH - BOTTOM COW	1		
8	10	22483	SCREW, LATCH ANCHOR (1-1/8"	2		
9	13	26992	LOCKWASHER, LATCH ANCHOR	2		
10	23	86214	BEARING, NYLON - WATER OUT	1		
11	26	36556	SEAL, RUBBER - WATER OUTLE	1		3
12	10	38111	SCREW, BOTTOM COWL (3/4")	1		
13	13	26992	LOCKWASHER, BOTTOM COWL	1		
14	27	89937	GASKET, POWERHEAD TO ADDO	1		3
15		74354	RETAINER	1	WIRING HARNESS (BOTTOM CO	
16	10	48408	SCREW, RETAINER TO BOTTO C	1		
17	24	78810	SPRING, CALBE TO ARM LATCH	1		
18		78809	LATCH, ARM - BOTTOM COWL	1		
19	29	71422	PIN, ARM LOCATING	1		
20		78808	LATCH, BODY - BOTTOM COWL	1		
21	10	32228	SCREW, LATCH TO BOTTOM CO	3		
22	27	39050	GASKET	1	BOTTOM COWL TO DRIVE SHAI	3
23	87	69508A31	STOP SWITCH ASSEMBLY MANI	1		
24	87	99525A 1	COVER ASSEMBLY, STOP SWI	1		
25	13	69845	LOCKWASHER, STOP SWITCH	1		
26	11	69844	NUT, STOP SWITCH MANUAL	1		
27		66376	HANDLE, SHIFT CONTROL (MAN	1		
27		93730	HANDLE, SHIFT CONTROL (ELEC	1		
28	12	29245	WASHER, SHIFT CONTROL SHAI	1		
29	11	39305	NUT, SHIFT HANDLE TO SHIFT C	1		
30	23	66375	BUSHING, NYLON - SHIFT CONTI	2		
31		74350	LEVER, SHIFT CONTROL (REMO	1		
32	17	25905	PIN, SHIFT LEVER TO SHIFT CO	1		
33		66379	SHAFT, SHIFT CONTROL	1		
34	43	66377	SECTOR GEAR	1	SHIFT CONTROL SHAFT (HORIZ	
35	12	29245	WASHER, SHIFT CONTROL SHAI	1		
36	11	20361	NUT, SECTOR GEAR TO SHIFT C	1		
37	24	39627	SPRING, DETENT - SHIFT CONTI	1		
38		39601	PLATE, DETENT SPRING	1		
39	10	25764	SCREW	2	PLATE AND SPRING TO ADAPT	
40	22	27122	BUSHING, NYLON, UPPER SHIF	1		