



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1556	8451A	DRIVE SHAFT HOUSING ASSEMBLY	1		
1	1558	8453A	DRIVE SHAFT HOUSING ASSEMBLY	1		
2	16	66373	STUD	1	DRIVE SHIFT HOUSING TO GEAR HOUSING	
3	11	35814	NUT, DRIVE SHAFT HOUSING STUD	1		
4	11	34863	NUT	1	GEAR HOUSING TO DRIVE SHAFT HOUSING	
5		96515	COVER, TRIM	1		
6	10	69013	SCREW, TRIM COVER (7/8")	4		
7	25	92012	GROMMET, TRIM COVER SCREW	4		
8	32	39061	TUBE, WATER (SHORT SHAFT)	1		
8	32	39062	TUBE, WATER (LONG SHAFT)	1		
9	10	79953	SCREW, FLUSH - DRIVE SHAFT HOUSING	1		
10	12	20260	WASHER, SEALING - FLUSH SCREW	1		
11	27	39050	GASKET	1	ADAPTOR PLATE TO DRIVE SHAFT HOUSING TO POWERHEAD	3
12	11	24652	NUT	6		
13	1559	8448A	SADDLE ASSEMBLY	1		
14		64076	BUMPER, THRUST - SADDLE	1		
15		79896A	MOUNT, LOWER AND UPPER (SHORT SHAFT)	4		
15		79896A	MOUNT, UPPER LONG SHAFT	2		
15		79895A	MOUNT, LOWER LONG SHAFT	2		
16	53	26406	RING, RETAINING - UPPER AND LOWER	4		
17		79907	COVER, LOWER MOUNT	2		
18		71057	LINK ROD, REVERSE LOCK	1		
19		65216	CAM, REVERSE LOCK	1		
20		72007	RETAINER, REVERSE LOCK CAM	1		
21	10	65414	SCREW, CAM RETAINER (3/4")	2		
22		93145	BLOCK, DRIVE SHAFT (LONG SHAFT)	1		
-	27	89014A80	GASKET SET			