

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2142	6228A	1 COWL ASSEMBLY (STARBOARD)	1		
2	26	60297	SEAL, FUEL CONNECTOR-COW	1		
3	2141	6227A	1 COWL ASSEMBLY (PORT)-WITHC	1		
4	26	60298	SEAL, CONTROL CABLES-COW	1		
5		69566	BRACKET, COWL SEALING-REAF	1		
6		69876	1 SEAL, REAR BRACKET	2		
7		69568	BRACKET, COWL HINGE	2		
8	10	45561	SCREW	2	HINGE BRACKET TO REAR BRA	
8	10	75794	SCREW	2	HINGE BRACKET TO REAR BRA	
8A		75805	CAP, HINGE BRACKET SCREW (U	2		
9	13	26992	LOCKWASHER, HINGE BRACKET	4		
10	12	37998	WASHER, HINGE BRACKET SCR	4		
10	12	75806	WASHER, HINGE BRACKET SCR	2		
11	17	60301	PIN, COWL HINGE	4		
12	10	28782	SCREW, PIN TO COWL (7/8")	4		
13	13	26993	LOCKWASHER, PIN ATTACHING :	4		
14		46785A	2 COWL LATCH ASSEMBLY	2		
15		62628	BARRELL, COWL LATCH	2		
16	10	31312	SCREW, LATCH ASSEMBLY TO B.	2		
17		62627	BAR, ADJUSTMENT-COWL LATC	2		
18		62629	BARREL, COWL LATCH	2		
19	24	62624	SPRING, TENSION - COWL LATC	2		
20	12	30164	WASHER, ADJUSTMENT BAR TC	2		
21	11	45812	NUT, ADJUSTMENT BAR TO BAF	2		
22	2143	5689A	5 FRONT COVER ASSEMBLY (WITI	1	UNITED STATES 4977156 AND I	
22	2143	7254A	3 FRONT COVER ASSEMBLY (WITI	1	UNITED STATES 4977157 AND I	
23		75165	BLANKET, SOUND ABSORBING	1	UNITED STATES 4977156 AND I	
23		79551	BLANKET, SOUND ABSORBINS	1	UNITED STATES 4977157 AND I	
24		61158	HOOK, FRONT COVER FASTEN	2		
25	10	69570	SCREW, FASTENING HOOK TO	1		
26		47341A	1 STARTER ROPE ASSEMBLY	1	(FOR MANUAL STARTING ONLY	

