



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	52901	NUT, FLYWHEEL	1		
2	12	68229	WASHER, FLYWHEEL NUT	1		
3	19	45907	PLUG, FLYWHEEL PULLER THRE	1		
4	248	5977A12	FLYWHEEL ASSWMBLY	1	UNITED STATES 5128279 AND I	
4	248	5977A25	FLYWHEEL ASSEMBLY	1	UNITED STATES 5128280 AND I	
5	10	68997	SCREW, PLATE/HUB TO FLEXI	8		
6	10	32417	SCREW, FLEXIBLE PLATE TO F	8		
7		73627	PLATE, SWITCH BOX	1		
8	25	57009	GROMMET, SWITCH BOX PLATE	3		
9	10	59645	SCREW	3	SWITCH BOX PLATE TO CYLIND	
10	12	56720	WASHER, SWITCH BOX PLATE	3		
11	332	5524A 1	SWITCH BOX ASSEMBLY	1		
12	10	26251	SCREW, SWITCH BOX TO PLATE	2		
13		46933A 6	WIRE ASSEMBLY, SWITCH BOX	2		
14	11	45076	NUT, SWITCH BOX TERMINAL	10		
15	84	60443A 3	WIRE ASSEMBLY, SWITCH BOX	1		
15	84	62822A 1	WIRE ASSEMBLY	1	SWITCH BOX TO COIL (GREEN/	
15	84	68896A 1	WIRE ASSEMBLY	1	SWITCH BOX TO COIL (GREEN/	
16	84	60466A17	WIRE ASSEMBLY, SWITCH BOX	3		
17		73439	PLATE, MOUNTING-IGNITION CO	1		
18	339	5748A 2	IGNITION COIL ASSEMBLY	3	UNITED STATES 5128279 AND I	
18	338	4995A 2	IGNITION COIL ASSEMBLY	3	UNITED STATES 5128280 AND I	
19	11	45076	NUT, IGNITION COIL TERMINAL	6		
20		73218	COVER, IGNITION COIL	1		
21	10	66944	SCREW, COVER TO MOUNTING	6		
22	398	5704A 2	STATOR ASSEMBLY	1	UNITED STATES 5128279 AND I	
22	398	5704A 5	STATOR ASSEMBLY	1	UNITED STATES 5128280 AND I	
23	10	63136	SCREW, STATOR TO UPPER EN	4		
24		68162A 6	TRIGGER PLATE ASSEMBLY	1		
25	54	28700	CLAMP, STATOR LEADS ATTACH	1		
26	10	20031	SCREW, CLAMP TO CRANKCASE	1		
27	84	73451A 8	WIRE ASSEMBLY, SPARK PLUG	3		
28	332	2854	BOOT, IGNITION COIL END	3		
29	33	57451	SPARK PLUG (AC#V40FFM)	3		
29	33	68098	SPARK PLUG	3	[CHAMPION #QL-76V] - CANADA	