



E-11

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	865	8362A 4	CYLINDER BLOCK AND CRANKCASE ASSEMBLY	1		
1A		66517	RESTRICTOR, CRANKCASE BL	2		
2	27	60286	GASKET, CRANKCASE TO CYL	2		6
3	16	68201	STUD	2	CRANKCASE TO DRIVE SHAFT I	
4	17	20033	DOWEL PIN, CRANKCASE TO C	2		
5	17	20323	DOWEL PIN, CYLINDER BLOCK	2		
6	16	92345	STUD, CYLINDER BLOCK (4-3/8	2		
7	16	68202	STUD, CYLINDER BLOCK (3")-E	1		
7	16	68167	STUD, CYLINDER BLOCK (2-9/1	1		
8		77636	COVER, STARTER MOTOR (BO	1		
9	10	77065	SCREW, STARTER MOTOR CO	2		
9A	13	26993	LOCKWASHER, STARTER MOT	4		
11		79735A 1	COVER, STARTER MOTOR (TO	1		
12	10	58414	SCREW, STARTER MOTOR CO	1		
12	10	35385	SCREW, STARTER MOTOR CO	1		
13	10	35385	SCREW, CRANKCASE TO CYLIN	10		
14	10	73657	SCREW, CRANKCASE TO CYLIN	2		
15	10	22039	SCREW, CRANKCASE TO CYLIN	2		
16	12	26020	WASHER, CRANKCASE SCREW	14		
17	11	29250	NUT, CRANKCASE SCREW (BOT	2		
18		79736	INDICATOR, TIMING	1		
19	10	58414	SCREW, INDICATOR TO STARTE	1		
19A	12	56720	WASHER, INDICATOR SCREW	1		
20	1161	6357A 1	END CAP ASSEMBLY, UPPER	1		
21	25	64966	"O" RING, END CAP	1		6
22	26	41953	OIL SEAL, END CAP	1		
23	10	73169	SCREW, UPPER END CAP MOUN	4		
24	15	73644A 1	SHIM, UPPER END CAP (.006-8-1)	AR		4
25	1144	6691A 1	END CAP ASSEMBLY, LOWER	1		
26	25	32546	"O" RING, END CAP	1		6
27	26	41953	OIL SEAL, END CAP	2		
28	10	69034	SCREW, LOWER END CAP MOUN	3		
29	156	20085A 1	SHIM, LOWER END CAP (.002-3-E	AR		4
30	22	29111	CONNECTOR, HOSE TO CYLIND	1		
31	32	77457 2	HOSE, TELL TALE (15")	1		
32	23	90882	SLEEVE, TELL TALE HOSE	1		
33		69555	NOZZLE, TELL TALE-REAR SUPP	1		
34	54	70705	CLAMP, TELL TALE NOZZLE	1		
35	10	48408	SCREW, TELL TALE CLAMP	1		
-	27	88449A32	GASKET SET			