



Parts List							
Ref	Class	Part	Description	Qty	Comment	Footnote	
		1643	7406A30	GEAR HOUSING ASSEMBLY, CO	1	(SHORT SHAFT)	
		1643	7406A31	GEAR HOUSING ASSEMBLY, CO	1	(LONG SHAFT)	
1		1643	7406A16	GEAR HOUSING ASSY	1		
51			76039	SHIFT CAM	1		
52	15		38374A 1	SHIM, BEARING CUP (.002-3-5-1	AR		4
53	31		38356A 1	TAPERED ROLLER BEARING A	1		
54	43		88018A 1	FORWARD GEAR	1		
55	31		21739	ROLLER BEARING, FORWARD	1		
56			38441	CAM FOLLOWER	1		
57			20843	SLIDE, CROSS PIN	1		
58	24		39845	SPRING, COMPRESSION-CAM F	1		
59	52		92911	RATCHET, SLIDING CLUTCH	1		
60	17		38113	CROSS PIN, RATCHET TO PRO	1		
61	24		38114	SPRING, RETAINING-CROSS PI	1		
62	44		75365	PROPELLER SHAFT	1		
63	43		88017	REVERSE FEAR	1		
64	12		32004	THRUST WASHER, REVERSE I	1		
65	30		20839	BALL BEARING, REVERSE GEA	1		
66	25		31986	"O" RING, BEARING CARRIER	1		6
67			69386A 1	BEARING CARRIER ASSEMBLY	1		
68	31		21700	ROLLER BEARING, BEARING	1		
69	26		69188	OIL SEAL, BEARING CARRIER	1		
70	26		69189	OIL SEAL, BEARING CARRIER	1		
71	28		30281	KEY, LOCATING, BEARING CAF	1		
72	14		53012	TAB WASHER, GEAR HOUSING	1		
73	11		87763	NUT, GEAR HOUSING	1		
74			31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
75	10		66024	SCREW, TRIM TAB TO GEAR H	1		
76	12		45175	WASHER, DRIVE SHAFT HOUSIN	1		
77	11		34863	NUT, DRIVE SHAFT HOUSING S1	1		
78	12		65791	WASHER, DRIVE SHAFT HOUSIN	1		
79	11		34933	NUT, DRIVE SHAFT HOUS STUD	1		
80			73345A 1	THRUST HUB, FRONT	1		
81	14		76281	TAB WASHER, PROPELLER	1		
82	11		69578A 1	PROPELLER NUT	1		
-	27		88449A32	GASKET SET			