



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	6038A19	GEAR HOUSING ASSEMBLY, COM	1		
-	1643	6038A20	GEAR HOUSING ASSEMBLY, COP	1		
1	1643	6038A 6	GEAR HOUSING ASSEMBLY	1		
2	17	46912	PIN, DOWEL-GEAR HOUSING	2		
3	16	33778	STUD, WATER PUMP BODY/	3		
4	16	57933	STUD, GEAR HOUSING TO D	2		
5	31	62091	BEARING, ROLLER-DRIVE SH	1		
6		72849A 1	SCREEN ASSEMBLY, PORT A	1		
6		63850	SCREEN WATER INTAKE-ST/	1		
6		63851	SCREEN, WATER INTAKE-PO	1		
7	10	36070	SCREW, SCREENS TO GEAR	1		
8	11	45812	NUT, SCREEN TO GEAR HOU	1		
9		38071	PLATE, SUPPORT - EXHAUST	1		
10		37721	SEAL, EXHAUST TUBE	1		1,2
11	43	60245	GEAR, PINION - DRIVE SHAFT	1		
12	11	55910	NUT, PINION GEAR TO DRIVE	1		
13	27	32771	GASKET, WATER PUMP BASE	1		1,2
14	25	26855	"O" RING, WATER PUMP BASE	1		1,2
15	46	73640A 1	WATER PUMP BASE ASSEMBL	1		
16	26	26782	OIL SEAL, WATER PUMP BAS	1		
17	26	23300	OIL SEAL, WATER PUMP BAS	1		
18	17	35973	DOWELL PIN, WATER PUMP	2		
19	27	32769	GASKET, LOWER - WATER PUI	1		1,2
20		54705	PLATE, FACE - WATER PUMP	1		
21	27	32770	GASKET, UPPER - FACE PLATE	1		1,2
22	47	65959	IMPELLER, WATER PUMP	1		
23	28	56662	KEY, IMPELLER DRIVE	1		
24	46	48746A 1	WATER PUMP BODY ASSEMBL	1		
25		48753	INSERT, WATER PUMP BOD\	1		
26	12	29245	WASHER, WATER PUMP BOD\	3		
27	11	36069	NUT, WATER PUMP BODY ANI	3		
28	26	38452	SEAL, WATER PUMP BODY TO	1		1,2
29	12	38453	WASHER, CUPPED - WATER T	1		
30	25	20273	RING, RUBBER - CENTRIFUGAI	1		1,2
31	10	28634	SCREW, GREASE FILLER AND	2		
32	12	20260	WASHER, GREASE FILLER ANI	2		
35		76063A 1	SHAFT ASSEMBLY, SHIFT - LOW	1		
36	53	29641	CLIP, RETAINING - SHIFT SH	1		
37	25	25439	"O" RING, SHIFT SHAFT BUSHI	1		1,2
38	23	55419A 1	BUSHING ASSEMBLY, SHIFT SI	1		
39	26	24590	OIL SEAL, SHIFT SHAFT BUSH	1		