



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A	RECTIFIER	1		
2	10	38055	SCREW, RECTIFIER TO PLATE (E	2		
3	13	26996	LOCKWASHER, RECTIFIER SCRE	2		
4	23	94304	SPACER, RECTIFIER SCREW	2		
5	11	45076	NUT, RECTIFIER TERMINAL	3		
6	89	76545	STARTER SOLENOID	1	UNITED STATES 6104369 AND I	
7	13	26996	LOCKWASHER, SOLENOID TERN	2	UNITED STATES 6104369 AND I	
8	11	68219	NUT, SOLENOID TERMINAL (#10	2	UNITED STATES 6104369 AND I	
9	13	26993	LOCKWASHER, SOLENOID TERN	2	UNITED STATES 6104369 AND I	
10	11	68292	NUT, SOLENOID TERMINAL (5/11	2	UNITED STATES 6104369 AND I	
6	89	96054	STARTER SOLENOID	1	UNITED STATES 6104370 AND I	
7	13	26995	LOCKWASHER, SOLENOID TERN	2	UNITED STATES 6104370 AND I	
8	11	26419	NUT, SOLENOID TERMINAL (#8-	2	UNITED STATES 6104370 AND I	
9	13	26992	LOCKWASHER, SOLENOID TERN	2	UNITED STATES 6104370 AND I	
10	11	94330	NUT, SOLENOID TERMINAL (1/2-	2	UNITED STATES 6104370 AND I	
11	85	78866	INSULATOR, STARTER SOLENO	1		
11	85	97861	INSULATOR, STARTER SOLENO	1		
12	10	69054	SCREW, SOLENOID TO ATTENU.	2		
13	13	26992	LOCKWASHER, SOLENOID SCRE	2		
14	50	65436	STARTER MOTOR ASSEMBLY	1		
15		57247	STOP, RUBBER-STARTER MOTC	2		
16	84	93388A	CABLE, STARTER TO SOUND AT	1		
17	10	69035	SCREW, CABLE TO STARTER M(	1		
18	84	93389A	CABLE	1	SOLENOID TO STARTER MOTO	
19	13	26992	LOCKWASHER, STARTER MOTO	1		
20	11	20890	NUT, STARTER MOTOR TERMIN	1		
21		56703	COLLAR, RUBBER-STARTER MO	2		
22	23	56774	SPACER, COLLAR TO MOUNTINC	AR		4
23	84	96271A	WIRING HARNESS (INTERNAL)	1		
23A	84	95084A	WIRE ASSEMBLY, FUSE	1		
23B	88	79091	FUSE	1		
24	54	88167	CLAMP, WIRING HARNESS	1		
25	10	23702	SCREW, WIRING HARNESS CLAI	1		
26	12	72761	WASHER, WIRING HARNESS CL	1		
27	24	28357	SPRING, WIRING HARNESS	1		
28	84	88439A	BATTERY CABLE (POSITIVE)	1		
28	84	88439A	BATTERY CABLE (NEGATIVE)	1		
29		88683	BRACKET, WIRING HARNESS SL	1		
30	10	23015	SCREW, BRACKET ATTACHING	2		
31		88682	COVER, HARNESS SUPPORT BR	1		
32	10	26158	SCREW, COVER TO BRACKET d	2		