



G-3

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		76395A	5 HYDRAULIC PUMP ASSY (METAL)	1	SEE PAGE 36 OR 37 FOR BREAK	
1		92975A	6 HYDRAULIC PUMP ASSY (PLAST)	1	SEE PAGE 36 OR 37 FOR BREAK	
2	25	48171	"O" RING, MANIFOLD PLATE (S	4		
3	10	79953	SCREW, FILLER-HYDRAULIC P	1		
4	12	20260	WASHER, SEALING-FILLER SCI	1		
5	10	62269	SCREW, VENT-HYDRAULIC PU	1		
6		32979	BATTERY LEAD (POSITIVE)	1		
6		32988	BATTERY LEAD (NEGATIVE)	1		
7		45336	PLATE, MANIFOLD	1		
8		45197A	2 CONTROL VALVE ASSEMBLY	1		
8	25	48171	"O" RING, MANIFOLD PLATE (S	4		
9	25	45254	"O" RING, CONTROL VALVE (3,	1		
10	25	48171	"O" RING, CONTROL VALVE (1,	1		
11	25	45253	"O" RING, CONTROL VALVE (5,	2		
12	10	56500	SCREW, VALVE AND MANIFOLD	4		
13	22	46008	PLUG, CONTROL VALVE (1/2-20"	2		
14	84	74023A	1 CONNECTOR AND HARNESS	1		
15		45377	BRACKET, MOUNTING	2		
16	10	35386	SCREW, MOUNTING BRACKET T	4		
17	13	39107	LOCKWASHER, MOUNTING BRAC	4		
18	11	21908	NUT, MOUNTING BRACKET SCR	4		
19	10	68298	BOLT, HYDRAULIC PUMP TO BO,	2		
20	11	99405	NUT, HYDRAULIC PUMP BOLT	2		
21	89	68258	STARTER SOLENOID	2		
22	13	26996	LOCKWASHER, SOLENOID TERM	4		
23	11	68219	NUT, SOLENOID TERMINAL (#10	4		
24	13	26993	LOCKWASHER, SOLENOID TERM	4		
25	11	68292	NUT, SOLENOID TERMINAL (5/1)	4		
26		46265	BOOT, RUBBER-STARTER SOLE	4		
27		74407	BRACKET, MOUNTING-STARTEF	1		
28	10	21140	SCREW, MOUNTING BRACKET T	2		
29	13	26992	LOCKWASHER, MOUNTING BRA	2		
30	11	24656	NUT, MOUNTING BRACKET TO F	1		
31		26901	BUMPER, RUBBER-SOLENOID BI	1		
32	84	79139A	2 JUMPER WIRE (POSITIVE)	1		
32		55992	JUMPER WIRE (NEGATIVE)	1		
33		74406	BRACKET, MOUNTING-STARTEF	1		
34	10	69028	SCREW, MOUNTING BRACKET T	2		
35	13	26992	LOCKWASHER, MOUNTING BRA	2		
36	10	34290	SCREW, STARTER SOLENOID TI	2		
37	12	26992	LOCKWASHER, STARTER SOLE	2		