



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	6038A19	GEAR HOUSING ASSEMBLY, CO	1	(SHORT SHAFT) SEE NOTE	
-	1643	6038A20	GEAR HOUSING ASSEMBLY, CO	1	SEE NOTE	
1	1643	6038A 6	GEAR HOUSING ASSEMBLY (SI	1		
50		54346	CAM, SHIFT	1		
51		38441	FOLLOWER, CAM	1		
52		20843	SLIDE, CROSS PIN	1		
53	24	39845	SPRING, COMPRESSION - CAM	1		
54	15	38374A 1	SHIM, BEARING CUP TO GEAR	AR		4
55	31	38356A 1	TAPERED ROLLER BEARING A	1		
56	31	21739	BEARING, ROLLER - FORWARD	1		
57	43	60247	FORWARD GEAR	1		
58	52	47586	RATCHET, SLIDING CLUTCH	1		
59	17	38113	PIN, CROSS - RATCHET TO PR	1		
60	24	38114	SPRING, RETAINING - CROSS F	1		
61	44	75365	SHAFT, PROPELLER	1		
62	43	66555	REVERSE GEAR	1		
63	15	20927A 1	SHIM, THRUST WASHER TO G	AR		4
64	12	32004	WASHER, THRUST - REVERSE	1		
65	30	20839	BEARING, BALL - REVERSE GE	1		
66	25	31986	"O" RING, BEARING CARRIER	1		1.2
67		69386A 1	BEARING CARRIER ASSEMBLY	1		
68	31	21700	BEARING, ROLLER - BEARIN	1		
69	26	69188	OIL SEAL, BEARING CARRIER	1		
70	26	69189	OIL SEAL, BEARING CARRIER	1		
71	28	30281	KEY, LOCATING- BEARING CAF	1		
72	14	53012	TAB WASHER, GEAR HOUSING	1		
73		53013	COVER, GEAR HOUSING	1		
74		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
75	10	66024	SCREW, TRIM TAB TO GEAR H	1		
76	12	45175	WASHER, DRIVE SHAFT HOUSI	1		
77	11	34863	NUT	1	DRIVE SHAFT HOUSING TO GE,	
78	12	65791	WASHER, DRIVE SHAFT HOUSI	1		
79	11	34933	NUT	1	DRIVE SHAFT HOUSING TO GE,	
80		73345	THRUST HUB, PROPELLER	1		
81	14	76281	TAB WASHER, PROPELLER	1		
82	11	69578	NUT, PROPELLER	1		
-	A-27	76589A77	GASKET SET			
-	A-28	76589A78	GASKET SET			