



| Parts List | | | | | | |
|------------|-------|--------|----------------------------------|-----|-----------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 62351A | RECTIFIER | 1 | | |
| 2 | 10 | 38055 | SCREW, RECTIFIER TO PLATE (5/16) | 2 | | |
| 3 | 13 | 26996 | LOCKWASHER, RECTIFIER SCREW | 2 | | |
| 4 | 23 | 94304 | SPACER, RECTIFIER SCREW | 2 | | |
| 5 | 11 | 45076 | NUT, RECTIFIER TERMINAL | 3 | | |
| 6 | 89 | 76545 | STARTER SOLENOID | 1 | UNITED STATES 6104369 AND I | |
| 7 | 13 | 26996 | LOCKWASHER, SOLENOID TERM | 2 | UNITED STATES 6104369 AND I | |
| 8 | 11 | 68219 | NUT, SOLENOID TERMINAL (#10) | 2 | UNITED STATES 6104369 AND I | |
| 9 | 13 | 26993 | LOCKWASHER, SOLENOID TERM | 2 | UNITED STATES 6104369 AND I | |
| 10 | 11 | 68292 | NUT, SOLENOID TERMINAL (5/16) | 2 | UNITED STATES 6104369 AND I | |
| 6 | 89 | 96054 | STARTER SOLENOID | 1 | UNITED STATES 6104370 AND I | |
| 7 | 13 | 26995 | LOCKWASHER, SOLENOID TERM | 2 | UNITED STATES 6104370 AND I | |
| 8 | 11 | 26419 | NUT, SOLENOID TERMINAL (#8) | 2 | UNITED STATES 6104370 AND I | |
| 9 | 13 | 26992 | LOCKWASHER, SOLENOID TERM | 2 | UNITED STATES 6104370 AND I | |
| 10 | 11 | 94330 | NUT, SOLENOID TERMINAL (1/2) | 2 | UNITED STATES 6104370 AND I | |
| 11 | 85 | 78866 | INSULATOR, STARTER SOLENO | 1 | | |
| 11 | 85 | 97861 | INSULATOR, STARTER SOLENO | 1 | | |
| 12 | 10 | 69054 | SCREW, SOLENOID TO ATTENU. | 2 | | |
| 13 | 13 | 26992 | LOCKWASHER, SOLENOID SCRE | 2 | | |
| 14 | 50 | 65436 | STARTER MOTOR ASSEMBLY | 1 | | |
| 15 | | 57247 | STOP, RUBBER-STARTER MOTC | 2 | | |
| 16 | 84 | 93388A | CABLE, STARTER TO SOUND AT | 1 | | |
| 17 | 10 | 69035 | SCREW, CABLE TO STARTER M(| 1 | | |
| 18 | 84 | 93389A | CABLE | 1 | SOLENOID TO STARTER MOTO | |
| 19 | 13 | 26992 | LOCKWASHER, STARTER MOTO | 1 | | |
| 20 | 11 | 20890 | NUT, STARTER MOTOR TERMIN | 1 | | |
| 21 | | 56703 | COLLAR, RUBBER-STARTER MO | 2 | | |
| 22 | 23 | 56774 | SPACER, COLLAR TO MOUNTING | AR | | 4 |
| 23 | 84 | 96271A | WIRING HARNESS (INTERNAL) | 1 | | |
| 23A | 84 | 95084A | WIRE ASSEMBLY, FUSE | 1 | | |
| 23B | 88 | 79091 | FUSE | 1 | | |
| 24 | 54 | 88167 | CLAMP, WIRING HARNESS | 1 | | |
| 25 | 10 | 23702 | SCREW, WIRING HARNESS CLAI | 1 | | |
| 26 | 12 | 72761 | WASHER, WIRING HARNESS CL | 1 | | |
| 27 | 24 | 28357 | SPRING, WIRING HARNESS | 1 | | |
| 28 | 84 | 88439A | BATTERY CABLE (POSITIVE) | 1 | | |
| 28 | 84 | 88439A | BATTERY CABLE (NEGATIVE) | 1 | | |
| 29 | | 88683 | BRACKET, WIRING HARNESS SL | 1 | | |
| 30 | 10 | 23015 | SCREW, BRACKET ATTACHING | 2 | | |
| 31 | | 88682 | COVER, HARNESS SUPPORT BR | 1 | | |
| 32 | 10 | 26158 | SCREW, COVER TO BRACKET | 2 | | |