



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42965A 1	BRACKET ASSEMBLY, COWL SE	1		
1		42965A 2	BRACKET ASSEMBLY, COWL SE	1		
2		18306 1	SEAL, BRACKET	2		
3		42935	SEAL	1		
4		42908	RESTRAINT	1		
5	10	40001 5	SCREW, RESTRAINT	1		
6	12	43423	WASHER, RESTRAINT SCREW	1		
7		42907	CONNECTOR, TELL TALE	1		
8	32	99129 76	HOSE, TELL TALE	1		
9		73498	STA-STRAP	1		
10		93264 1	HOUSING, HINGE	2		
11	10	40095 60	SCREW, HOUSING	4		
12	12	93853	WASHER, HOUSING SCREW	8		
13	12	53705	WASHER, HOUSING SCREW	8		
14	25	88033	GROMMET, HOUSING SCREW	4		
15	23	14395	BUSHING, HOUSING SCREW	4		
16	10	40001 20	SCREW, HOUSING TO BRACKET	2		
17	12	43423	WASHER, HOUSING SCREW	2		
18		42952T	BRACKET, SUPPORT (FRONT) (N	1		
18		42952T 6	BRACKET, SUPPORT (FRONT) (N	1		
19		67260	SEAL, CONTROL CABLES	1		
20	25	67272	GROMMET, BRACKET	2		
21		88621	RETAINER, CONTROL CABLES (F	1		
21		99447T	RETAINER, CONTROL CABLES (F	1		
22	10	40057109	SCREW, RETAINER	2		
23	10	40111 35	SCREW, BRACKET	2		
24	12	93853	WASHER, BRACKET SCREW	4		
25	12	53705	WASHER, BRACKET SCREW	4		
26	25	88033	GROMMET, BRACKET	2		
27	23	14395	BUSHING, BRACKET SCREW	2		