



GEAR HOUSING (DRIVE SHAFT)

Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1667	9011A 7	GEAR HOUSING ASSEMBLY (LON	1	
-	1667	9011A13	GEAR HOUSING ASSEMBLY (X-L	1	
-	1667	9011A 9	GEAR HOUSING ASSEMBLY (LON	1	
-	1667	9011A14	GEAR HOUSING ASSEMBLY (X-L	1	
1	1667	9011A 6	GEAR HOUSING ASSEMBLY (I	1	
1	1667	9011A 8	GEAR HOUSING ASSEMBLY (I	1	
2	17	43043	DOWEL PIN (FRONT)	1	
3	10	28653	SCREW, VENT	1	
4	12	20262	WASHER, VENT SCREW	1	10
5	10	79953	SCREW, GREASE FILLER	1	
6	12	20260	WASHER, DRAIN/FILLER SCF	2	10,6,5
7	22	67892	SCREW, DRAIN (MAGNETIC)	1	
8	17	43044	DOWEL PIN (REAR) (QTY. OF	1	
9		31640A 1	TRIM TAB	1	
10	10	15942	SCREW, TRIM TAB	1	
11	12	45176	WASHER, TRIM TAB SCREW	1	
12		43040A 1	CARRIER, ROLLER BEARING	1	
13	43	44484	PINION GEAR	1	
14	11	35921	NUT, PINION GEAR TO DRIVE :	1	
15		76039	CAM, SHIFT	1	
16	31	42677A 1	TAPERED ROLLER BEARING A	1	
17	15	44492A 1	SHIM ASSEMBLY	1	
18	45	43031A 1	DRIVE SHAFT ASSEMBLY (LON	1	
18	45	43032A 4	DRIVE SHAFT ASSEMBLY (X-LC	1	
19		42461A 1	WEAR SLEEVE ASSEMBLY	1	
20		43055A 2	COVER ASSEMBLY	1	5
21	27	43047	GASKET, COVER TO GEAR H	1	10,5
22	26	43036	OIL SEAL (LOWER)	1	5,6
23	26	43035	OIL SEAL (UPPER)	1	5,6
24	27	43033	GASKET, COVER TO FACE PL	1	10,5
25	27	43034	GASKET, WATER PUMP TO F	1	10,5,6
26		43050	FACE PLATE	1	5
27	28	43037	KEY, IMPELLER DRIVE	1	5
28	47	43026 1	IMPELLER	1	5
29	46	43024A 3	WATER PUMP ASSEMBLY	1	5
30		43023	SEAL, WATER TUBE	1	10,5,6
31	10	40003 30	SCREW, COVER	6	
32	10	40003 32	SCREW, WATER PUMP	4	
33	12	40023 15	WASHER	10	
34	23	43045	INSULATOR, WATER PUMP SC	4	5,6
35		43048A 1	SHIFT SHAFT ASSEMBLY (LON	1	