



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	167	1633A 2	BOTTOM COWL ASSEMBLY	1,1		
2		21041	INSERT, TAP-LOCK	1,1		
3		29229A 1	TRIM MOULDING ASSEMBLY (C	1,1		
4	10	29226	SCREW, DECORATIVE - TRIM	5,5		
5	12	24671	WASHER, FIBRE - MOULDING	4,4		
6	11	29225	NUT, NYLON CAP - MOULDIN	4,4		
7	13	26995	LOCKWASHER, MOULDING F	1,1		
8	11	26419	NUT, BRASS - MOULDING FA	1,1		
9		23760	BAFFLE, BOTTOM COWL	1,1		
10	10	21106	SCREW, BAFFLE TO BOTTOM CC	3,3		
11	22	29111	CONNECTOR, DISTRIBUTOR VENT	2,2		
--	22	25885	ELBOW, DISTRIBUTOR VENT TL	1,1		
12	32	26407	TUBE, VENT - DISTRIBUTOR (16'	1,1		
13	32	26542	TUBE, VENT - DISTRIBUTOR (13'	1,1		
14		27971	BRACKET, RECTIFIER MOUNTIN	1,1		
15	10	22956	SCREW, BRACKET TO BOTTOM	1,1		
16	10	21091	SCREW, BRACKET TO BOTTOM	2,2		
17	11	20184	NUT, RECTIFIER BRACKET MOU	3,3		
18		26514	BRACKET, COIL FASTENING	1,1		
19		26512	BAND, COIL BRACKET	1,1		
20	10	21625	SCREW, COIL BRACKET TO BOT	1,1		
21	10	22421	SCREW, COIL BRACKET TO BOT	1,1		
22	11	20184	NUT, COIL BRACKET SCREW	2,2		
23	10	26889	SCREW, COIL BAND TO BRACKE	1,1		
24	11	20184	NUT, COIL BAND SCREW	1,1		
25	16	20077	STUD, COIL BRACKET TO SUPPC	1,1		
26		26552	SUPPORT, EXTERNAL WIRING F	1,1		
27	12	20084	WASHER, COIL BRACKET STUD	1,1		
28	11	25594	NUT, COIL BRACKET STUD	1,1		
29	27	26197	GASKET, POWERHEAD TO BOT1	1,1		
30	10	21504	SCREW, BOTTOM COWL TO DRI	1,1		
31		20557	BRACKET, CABLE END ANCHOR	1,1		
32	10	29200	SCREW, ANCHOR BRACKET TO	2,2		
33		21968	STOP BLOCK, THROTTLE ADJUS	2,2		
34	12	21967	WASHER, STOP BLOCK SCREW	2,2		
35	10	28636	SCREW, STOP BLOCK HOLDING	2,2		
36		29393	LEVER, CONTROL	1,1		
37	24	29109	SPRING, TENSION - CONTROL LI	1,1		
38	10	26632	SCREW, CONTROL LEVER TO B	1,1		
39	12	29395	WASHER, CONTROL LEVER SCF	2,2		
40	22	29529	PUSHING STEEL, CONTROL LE	1,1		