



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	832	1411A 3	CYLINDER BLOCK AND CRANKC	1,1		
2	17	20032	DOWEL PIN, CYLINDER BLOCK	3,3		
3	23	26348	BUSHING, CRANKCASE - COWL	2,2		
4	16	21831	STUD, CARBURETOR MOUNTI	6,6		
5	17	20033	DOWEL PIN, CRANKCASE TO CY	2,2		
6	16	26133	STUD, CRANKCASE TO DRIVE	2,2		
7	16	26135	STUD, CYLINDER BLOCK TO D	4,4		
8	16	26134	STUD, CYLINDER BLOCK TO D	2,2		
9	22	21290	PLUG, PIPE - BLEED HOLE	AR,AR		
10	10	22039	SCREW, CRANKCASE TO CYLINC	2,2		
10	10	27005	SCREW, CRANKCASE TO CYLINC	1,1		
10	10	26132	SCREW, CRANKCASE TO CYLINC	2,2		
11	10	22040	SCREW, CRANKCASE TO CYLINC	18,18		
11	10	21574	SCREW, CRANKCASE TO CYLINC	3,3		
12	11	29250	NUT, CRANKCASE FASTENING S	26,26		
13		26551	BRACKET, CLAMP EXTENSION	2,2		
14	10	20089	SCREW, MAIN BEARING LOCKIN	3,3		
15	10	20359	SCREW, CENTER MAIN BEARINC	2,2		
16	14	20091	TAB WASHER, BEARING LOCKIN	5,5		
17	1100	1438A 1	END CAP ASSEMBLY, UPPER	1,1		
18	26	29476	OIL SEAL	1,1		
19	25	20081	"O" RING	1,1		
20	30	20080	BEARING, BALL	1,1		
21	15	20082A 1	SHIM, END CAP TO CRANKCASE	AR,AR		
22	10	29198	SCREW, END CAP MOUNTING	4,4		
23	1102	1485A 1	END CAP ASSEMBLY, LOWER	1,1		
24	26	29476	OIL SEAL (UPPER)	1,1		
24	26	29478	OIL SEAL (LOWER)	1,1		
25	25	20081	"O" RING	1,1		
26	30	20080	BEARING, BALL	1,1		
--	21	28481A 1	CHECK VALVE ASSEMBLY, ENC	1,1		
27	15	20085A 1	SHIM, END CAP TO CRANKCASE	AR,AR		
28	10	29198	SCREW, END CAP MOUNTING	3,3		
30	27	30089	GASKET, CYLINDER BLOCK TO K	1,1		
29		30065	PLATE, EXHAUST MANIFOLD	1,1		
30	27	30089	GASKET, MANIFOLD PLATE TO C	1,1		
31		30088	COVER, EXHAUST MANIFOLD	1,1		
32	10	28668	SCREW, MANIFOLD COVER MOL	21,21		
33	54	26519	CLAMP, SPARK PLUG LEADS TO	3,3		
34		30109	GROUND STRAP ASSEMBLY, CY	1,1		
35		28689	SWITCH, MERCURY	1,1		