



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1,1		
2	12	26617	WASHER, FLYWHELL NUT	1,1		
3	28	20094	KEY, FLYWHEEL DRIVE	1,1		
4	212	1424A 4	FLYWHEEL ASSEMBLY	1,1		
5		22823	PULLEY, FLYWHEEL (SEE NOT	1,		
7	12	25293	WASHER, PULLEY TO FLYWHE	1,		
-		29788	FLANGE, FLYWHEEL PULLEY	,1		
-		30306	PULLEY, FLYWHEEL	,1		
-		29787	HUB, FLANGE - FLYWHEEL PUI	,1		
6	17	26618	DOWEL PIN, PULLEY TO FLYW	1,1		
8	50	25263	RATCHET, FLYWHEEL	1,1		
9	10	29238	SCREW, RATCHET TO FLYWHI	3,3		
10	398	1658	STATOR, ALTERNATOR	1,1		
11		30050	TERMINAL, STATOR LEAD WIF	2,2		
12	10	29283	SCREW, STATOR TO UPPER EN	4,4		
13	54	24836	CLIP, TATOR LEAD TO EXHUAST	1,1		
14		22789	"D"WASHER CLIP FASTENING S	1,1		
15	10	30009	SCREW, STATOR LEAD CLIP FAS	1,1		
16	54	22783	"S" CLIP, STATOR LEAD TO BOT	3,3		