



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1619	1646A 2	GEAR HOUSING ASSEMBLY, COM	1	
1	1619	1646A 1	GEAR HOUSING ASSEMBLY	1	
2	31	20231	BEARING, ROLLER - PROPEL	2	
3	16	29078	STUD, GEAR HOUSING TO D	2	
4	16	29079	STUD, GEAR HOUSING TO D	1	
5	16	29589	STUD, WATER PUMP COVER	3	
6	16	29592	STUD, WATER PUMP COVER	2	
7	35	26189	SCREEN, WATER INTAKE	1	
8	45	29606	DRIVE SHAFT (STANDARD)	1	
9	43	27889	GEAR, PINION - DRIVE SHAFT	1	
10	12	22025	WASHER, PINION GEAR TO RE	1	
11	11	20220	NUT, PINION GEAR RETAINI	1	
12	15	20929A 1	SHIM, DRIVE SHAFT BALL BEA	AR	
13	30	20861	BEARING, BALL - DRIVE SHAFT	1	
14	53	29116	RING, RETAINING - BALL BEAR	1	
12	15	20929A 1	SHIM, DRIVE SHAFT BALL BEA	AR	
15	25	26855	"O" RING, WATER PUMP BASE	1	
16	46	29972A 1	WATER PUMP BASE ASSEMBL	1	
17	26	29595	OIL SEAL, WATER PUMP BAS	1	
18	17	29596	PIN, DOWEL - WATER PUMP	2	
19	27	30018	GASKET, LOWER - WATER PUI	1	
20		29600	PLATE, FACE - WATER PUMP E	1	
21	27	30019	GASKET, UPPER - FACE PLATE	1	
22	46	30017A 1	WATER PUMP BODY ASSEMBL	1	
23		29104	INSERT, WATER PUMP BOD	1	
24	26	23517	OIL SEAL, WATER PUMP BOC	1	
25	47	30041	IMPELLER, WATER PUMP	1	
26	17	23733	PIN, IMPELLER DRIVE	1	
27	22	26220A 1	WATER VALVE AND ADAPTOR	2	
28	21	26491	VALVE, WATER	2	
29	54	26492	CLAMP, WATER VALVE TO AI	2	
30	15	21158A 1	SHIM, VALVE ADAPTOR TO W	AR	
31	13	26993	LOCKWASHER, WATER PUMP	3	
32	11	28770	NUT, WATER PUMP BODY STL	3	
33	13	26992	LOCKWASHER, WATER PUMP	2	
34	11	21869	NUT, WATER PUMP BODY STL	2	
35	25	20273	RING, RUBBER - CENTRIFUGAI	1	
36	26	29677	SEAL, RUBBER - WATER PUMF	2	
37	23	29804	SLEEVE, WATER INLET TUBE	1	
38	26	26207	SEAL, RUBBER - WATER INTA	1	
39	22	29602	TUBE, WATER INTAKE, LOWE	1	