



				Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote	
1		29178A 2	FUEL PUMP ASSEMBLY, UPPER	1			
1		30269A 2	FUEL PUMP ASSEMBLY, UPPER	.1			
2	27	23005	GASKET, CHECK VALVE TO HO	2,2			
3	21	20963	VALVE, CHECK - FUEL PUMP	2,2			
4		23004	RETAINER, CHECK VALVE	1,1			
5	10	20037	SCREW, RETAINER TO HOUSII	2,2			
6	27	24863	GASKET, FUEL PUMP	2,2			
7		23014	DIAPHRAGM, FUEL PUMP	1,1			
-	22	29380	PLUG, PIPE - FUEL PUMP HOUSI	1,			
1		29127A 2	FUEL PUMP ASSEMBLY, LOWER	1,1			
2	27	23005	GASKET, CHECK VALVE TO HO	2,2			
3	21	20963	VALVE, CHECK	2,2			
4		23004	RETAINER, CHECK VALVE	1,1			
5	10	20037	SCREW, RETAINER TO HOUSII	2,2			
6	27	24863	GASKET, FUEL PUMP	2,2			
7		23014	DIAPHRAGM, FUEL PUMP	1,1			
8		29044	COVER, FUEL PUMP	2,2			
9	27	23013	GASKET, FUEL PUMP COVER	2,2			
10	10	29126	SCREW, FUEL PUMP MOUNTING	4,4			
11	10	29029	SCREW, FUEL PUMP MOUNTING	2,2			
12	32	30035	FUEL LINE, UPPER PUMP TO LO	1,1			
13	22	22995	ELBOW, UPPER FUEL PUMP OU	1,1			
14	22	22946	SLEEVE, RUBBER	1,1			
15	11	22948	NUT, ELBOW	1,1			
16	32	29324	FUEL LINE, LOWER PUMP OUTL	1,1			
13	22	22995	ELBOW, LOWER FUEL PUMP INL	1,1			
14	22	22946	SLEEVE, RUBBER	1,1			
15	11	22948	NUT, ELBOW	1,1			
-	22	23595	CONNECTOR, LOWER FUEL PUM	.1			
-	22	24690	ELBOW, FUEL PUMP OUTLET	.1			
17	32	30036	FUEL LINE, ADAPTOR TO LOWE	1,1			
18		22833	ADAPTOR, CHECK UNIT (FUEL LI	1,1			
19		23069	STEM, CHECK UNIT ADAPTOR	1,1			
20	25	20415	"O" RING, ADAPTOR STEM	1,1			
21	24	23067	SPRING, ADAPTOR STEM	1,1			
22		23068	CUP WASHER, ADAPTOR	1,1			
23	10	20784	SCREW, ADAPTOR TO BOTTOM	2,2			
24	11	20184	NUT, ADAPTOR FASTENING SCF	2,2			
25	32	30040	FUEL LINE, CENTER TO LOWER	1,1			
26		30038	FUEL LINE, UPPER TO CENTER	1,1			
27	22	26955	TEE, CENTER AND LOWER CAR	2,2			