



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1619	1768A 4	GEAR HOUSING ASSEMBLY, CO	1	
1	1619	1768A 1	GEAR HOUSING ASSEMBLY	1	
2	31	20231	BEARING, ROLLER - PROPEL	2	
3	16	29078	STUD, GEAR HOUSING TO D	2	
4	16	29079	STUD, GEAR HOUSING TO D	1	
5	16	29589	STUD, WATER PUMP COVER	3	
6	16	29592	STUD, WATER PUMP COVER	2	
7	45	29606	DRIVE SHAFT (STANDARD)	1	
8	43	27889	GEAR, PINION - DRIVE SHAFT	1	
9	12	22025	WASHER, PINION GEAR TO RE	1	
10	11	20220	NUT, PINION GEAR RETAININ	1	
11	15	20929A 1	SHIM, DRIVE SHAFT BALL BEA	AR	
12	30	20861	BEARING, BALL - DRIVE SHAFT	1	
13	53	29116	RING, RETAINING - BALL BEAR	1	
11	15	20929A 1	SHIM, DRIVE SHAFT BALL BEA	AR	
14	25	26855	"O" RING, WATER PUMP BASE	1	
15	46	29972A 1	WATER PUMP BASE ASSEMBL	1	
16	26	29595	OIL SEAL, WATER PUMP BAS	1	
17	17	29596	PIN, DOWEL - WATER PUMP	2	
18	27	30018	GASKET, LOWER - WATER PUI	1	
19		29600	PLATE, FACE - WATER PUMP	1	
20	27	30019	GASKET, UPPER - FACE PLATE	1	
21	46	30017A 1	WATER PUMP BODY ASSEMBL	1	
22		29104	INSERT, WATER PUMP BOD	1	
23	26	23517	OIL SEAL, WATER PUMP BOU	1	
24	47	30041	IMPELLER, WATER PUMP	1	
25	17	23733	PIN, IMPELLER DRIVE	1	
26	22	26220A 1	WATER VALVE AND ADAPTOR	2	
27	21	26491	VALVE, WATER	2	
28	54	26492	CLAMP, WATER VALVE TO AI	2	
29	15	21158A 1	SHIM, VALVE ADAPTOR TO W/	AR	
30	13	26993	LOCKWASHER, WATER PUMP	3	
31	11	28770	NUT, WATER PUMP BODY STL	3	
32	13	26992	LOCKWASHER, WATER PUMP	2	
33	11	21869	NUT, WATER PUMP BODY STL	2	
34	25	20273	RING, RUBBER - CENTRIFUGAI	1	
35	26	29677	SEAL, RUBBER - WATER PUMF	2	
36	23	29804	SLEEVE, WATER INLET TUBE	1	
37	26	26207	SEAL, RUBBER - WATER INTA	1	
38	32	29602	TUBE, WATER INTAKE - LOWE	1	
39	22	29591	SLEEVE, WATER INTAKE TUBE	1	