



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1619	1646A 4	GEAR HOUSING ASSEMBLY, COM	1		
1	1619	1646A 3	GEAR HOUSING ASSEMBLY	1		
2	31	20231	BEARING, ROLLER - PROPEL	2		
3	16	29078	STUD, GEAR HOUSING TO D	2		
4	16	29079	STUD, GEAR HOUSING TO D	1		
5	16	29589	STUD, WATER PUMP COVER	3		
6	16	29592	STUD, WATER PUMP COVER	2		
7	35	29073	SCREEN, WATER INTAKE	1		
8	45	29606	DRIVE SHAFT (STANDARD)	1		
9	43	27889	GEAR, PINION - DRIVE SHAFT	1		
10	12	22025	WASHER, PINION GEAR TO RE	1		
11	11	20220	NUT, PINION GEAR RETAININ	1		
12	15	20929A 1	SHIM, DRIVE SHAFT BALL BEA	AR		
13	30	20861	BEARING, BALL - DRIVE SHAFT	1		
14	53	29116	RING, RETAINING - BALL BEAR	1		
12	15	20929A 1	SHIM, DRIVE SHAFT BALL BEA	AR		
15	25	26855	"O" RING, WATER PUMP BASE	1		
16	46	29972A 1	WATER PUMP BASE ASSEMBL	1		
17	26	29595	OIL SEAL, WATER PUMP BAS	1		
18	17	29596	PIN, DOWEL - WATER PUMP	2		
19	27	30018	GASKET, LOWER - WATER PUI	1		
20		29600	PLATE, FACE - WATER PUMP E	1		
21	27	30019	GASKET, UPPER - FACE PLATE	1		
22	46	30017A 1	WATER PUMP BODY ASSEMBL	1		
23		29104	INSERT, WATER PUMP BODY	1		
24	26	23517	OIL SEAL, WATER PUMP BOC	1		
25	47	30041	IMPELLER, WATER PUMP	1		
26	17	23733	PIN, IMPELLER DRIVE	1		
27	22	26220A 1	WATER VALVE AND ADAPTOR	2		
28	21	26491	VALVE, WATER 2	2		
29	54	26492	CLAMP, WATER VALVE TO AI	2		
30	15	21158A 1	SHIM, VALVE ADAPTOR TO W/	AR		
31	13	26993	LOCKWASHER, WATER PUMP	3		
32	11	28770	NUT, WATER PUMP BODY STL	3		
33	13	26992	LOCKWASHER, WATER PUMP	2		
34	11	21869	NUT, WATER PUMP BODY STL	2		
35	25	20273	RING, RUBBER - CENTRIFUGAI	1		
36	26	29677	SEAL, RUBBER - WATER PUMF	2		
37	23	29804	SLEEVE, WATER INLET TUBE	1		
38	26	26207	SEAL, RUBBER - WATER INTA	1		
39	22	29602	TUBE, WATER INTAKE, LOWE	1		