



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		29766	WIRING HARNESS, INTERNAL	1,1		
2		30050	TERMINAL, HARNESS AND ME	AR,AR		
3	24	28975	SPRING,GARTER - INTERNAL W	1,1		
4		26079	PLATE, WIRING HARNESS TO B	1,1		
5	10	26128	SCREW, HARNESS PALTE FASTI	4,4		
6	54	22783	"S"CLIP, RECTIFIER HARNESS L	2,2		
7		29691	RECTIFIER ASSEMBLY	1,1		
8	13	26993	LOCKWASHER, RECTIFIER MO	1,1		
9	11	21929	NUT, RECTIFIER MOUNTING S	1,1		
10	32	28052	SLEEVE, RUBBER - RECTIFIER H	1,1		
11	32	28373	SLEEVE, RUBBER - RECTIFIER S	2,2		
12	10	29852	SCREW, HARNESS AND STATOF	3,3		
13	11	29488	NUT, HARNESS AND STATOR LE	3,3		
14	50	29037	STARTER MOTOR ASSEMBLY	1,1		
15	15	26496	SHIM, STARTER MOTOR TO CR/	AR,AR		
16	10	22698	SCREW, STARTER MOTOR TO C	2,2		
17	13	26993	LOCKWASHER, STARTER MOTO	2,2		
18		27026	BRACKET, SUPPORT - STARTER	1,1		
19	12	24664	WASHER, THRU BOLT - BRACKE	1,1		
20	13	26992	LOCKWASHER, THRU BOLT - BR	2,2		
21	11	20890	NUT, THRU BOLT - BRACKET T	2,2		
22		26511	CABLE, WIRE - STARTER TO UPI	1,1		
23		25596	CABLE, WIRE - STARTER TO LO\	1,1		
24	54	20534	CLAMP, LOWER CABLE - STARTE	1,1		
25		26478A	JUMPER ASSEMBLY, SOLENOID	1,		
26	32	26622	SLEEVE, JUMPER	1,		
--		30070	JUMPER, SOLENOID TO SOLENC	,1		
27	10	29197	SCREW, WIRING HARNESS GRC	1,1		
28		28937	SOLENOID, STARTER	2,2		
29		28922	LEAD, JUMPER - SOLENOID TO E	1,1		
30	13	26993	LOCKWASHER, SOLENOID TERM	4,4		
31	11	20083	NUT, SOLENOID TERMINAL (5/1)	4,4		
32	13	26996	LOCKWASHER, SOLENOID TERM	3,3		
33	11	20645	NUT, SOLENOID TERMINALJ (#1	4,4		
34	10	29238	SCREW, SOLENOID TO STARTE	4,4		
35	54	23567	CLAMP, WIRING HARNESS TO S	1,1		
36		22789	"D" WASHER, HARNESS CLAMP	1,1		
37	10	26548	SCREW, HARNESS CLAMP FAST	1,1		
38		29714	BLOCK, TERMINAL - UPPER FUE	1,1		
39	10	24241	SCREW, TERMINAL BLOCK FAST	2,2		
40	13	26995	LOCKWASHER, TERMINAL BLO	2,2		