



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1623	2003A 3	GEAR HOUSING ASSEMBLY, COI	1	#
-	1623	2003A 2	GEAR HOUSING ASSEMBLY, COI	1	#
-	1623	2022A 5	GEAR HOUSING ASSEMBLY, COI	1	
-	1623	2022A 2	GEAR HOUSING ASSEMBLY, COI	1	
1	1623	2003A 1	GEAR HOUSING ASSEMBLY	1	#
1	1623	2022A 1	GEAR HOUSING ASSEMBLY	1	
2	16	30661	STUD, GEAR HOUSING TO D	1	
3	16	29078	STUD, GEAR HOUSING TO D	2	
4	16	30669	STUD, WATER PUMP BASE A	1	
5	16	30667	STUD, WATER PUMP BASE A	2	
6	31	29982	BEARING, ROLLER - DRIVE S	1	
7	45	38459	DRIVE SHAFT (SHORT SHAFT)	1	
7	45	38460	DRIVE SHAFT (LONG SHAFT)	1	
8	43	30566	GEAR, PINION - DRIVE SHAFT	1	#
8	43	31419	GEAR, PINION - DRIVE SHAFT	1	
9	11	30932	NUT, PINION GEAR TO DRIVE :	1	
10	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AF	
11	30	20464	BEARING, BALL - DRIVE SHAFT	1	
12	53	30226	RING, RETAINING - BALL BEAR	1	
13	27	32438	GASKET, WATER PUMP BASE	1	
14	25	30224	"O" RING, WATER PUMP BASE	1	
15	46	31277A 1	WATER PUMP BASE ASSEMBL	1	#
15	46	32436A 1	WATER PUMP BASE ASSEMBL	1	
16	26	31489	OIL SEAL, WATER PUMP BAS	1	
17	17	29596	DOWEL PIN, WATER PUMP E	2	
18	27	31285	GASKET, LOWER - WATER PUI	1	#
18	27	32433	GASKET, LOWER - WATER PUI	1	*
19		31287	PLATE, FACE - WATER PUMP E	1	#
19		32435	PLATE, FACE - WATER PUMP E	1	*
20	27	31286	GASKET, UPPER - FACE PLATE	1	#
20	27	32434	GASKET, UPPER - FACE PLATE	1	*
21	46	31273A 1	WATER PUMP BODY ASSEMBL	1	#
21	46	32437A 1	WATER PUMP BODY ASSEMBL	1	*
22		30915	INSERT, WATER PUMP BOD	1	
23	26	31507	OIL SEAL, WATER PUMP BOC	1	
24	47	30221	IMPELLER, WATER PUMP	1	
25	17	29967	PIN, IMPELLER DRIVE	1	
26	10	30720	SCREW, WATER PUMP BODY	1	
27	13	26992	LOCKWASHER, WATER PUMP	3	
28	11	29598	NUT, WATER PUMP BODY FAS	2	
29	12	26992	LOCKWASHER, WATER PUMP	1	