



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1623	2003A 3	GEAR HOUSING ASSEMBLY, COI	1	#
-	1623	2003A 2	GEAR HOUSING ASSEMBLY, COI	1	#
-	1623	2022A 5	GEAR HOUSING ASSEMBLY, COI	1	*
-	1623	2022A 2	GEAR HOUSING ASSEMBLY, COI	1	*
1	1623	2003A 1	GEAR HOUSING ASSEMBLY SE	1	#
1	1623	2022A 1	GEAR HOUSING ASSEMBLY	1	*
50		36288	CAM, SHIFT	1	
51		30625	FOLLOWER, CAM	1	
52		30624	SLIDE, CROSS PIN	1	
53	24	30622	SPRING, COMPRESSION - CAM	1	
54	15	30923A 1	SHIM, BEARING OUTER RACE	AR	
55	43	30938	FORWARD GEAR ASSEMBLY	1	#
56	31	30895	BEARING, ROLLER - FORWAR	1	
57	31	30894A 1	TAPERED ROLLER BEARING	1	
58	31	31092	CUP, TAPERED ROLLER BE	1	
55	43	31886	FORWARD GEAR ASSEMBLY	1	*
56	31	30895	BEARING, ROLLER - FORWAR	1	
57	31	30894A 1	TAPERED ROLLER BEARING	1	
58	31	31092	CUP, TAPERED ROLLER BE	1	
59		30941	RATCHET, SLIDING CLUTCH	1	#
59	52	34239	RATCHET, SLIDING CLUTCH	1	*
60	17	30632	PIN, CROSS - RATCHET TO PR	1	
61	24	30893	SPRING, RETAINING - CROSS F	1	
62	44	30944	SHAFT, PROPELLER	1	
63	43	30937	REVERSE GEAR ASSEMBLY	1	#
64	30	30548	BEARING, BALL - REVERSE G	1	#
63	43	31887	REVERSE GEAR ASSEMBLY	1	*
64	30	31265	BEARING, BALL - REVERSE G	1	*
65	15	29955A 1	SHIM, THRUST WASHER TO G	AR	
66	12	30633	WASHER, THRUST - BEARING	1	
67	25	29976	"O" RING, BEARING CARRIER	1	
68		30579A 1	BEARING CARRIER ASSEMBLY	1	#
68		31284A 1	BEARING CARRIER ASSEMBLY	1	*
68	31	30956	BEARING, ROLLER - BEARIN	1	
70	26	30550	OIL SEAL, BEARING CARRIEF	2	
71	28	30281	KEY, LOCATING - BEARING CA	1	
72	12	29957	WASHER, GEAR HOUSING COV	1	
73		31037	COVER, GEAR HOUSING	1	
74	12	31013	WASHER, THRUST - BEARING C.	1	
75		30581A 1	THRUST HUB AND WASHER AS	1	
76	12	29590	WASHER, CURVED, THRU	1	