



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30820	WIRING HARNESS, INTERNAL	1,1,1		
1		32457	WIRING HARNESS, INTERNAL (N	,,1	ON MERC 700E-2 ENGINES STA #	#
2		30050	TERMINAL, HARNESS AND ME	AR,AR,		
3	24	28975	SPRING, GARTER - INTERNAL W	1,1,1		
4		26079	PLATE, WIRING HARNESS TO B	1,1,1		
5	10	26128	SCREW, HARNESS PLATE FAST	4,4,4		
6	54	22783	"S" CLIP, RECTIFIER HARNESS I	2,2,2		
7		29691	RECTIFIER ASSEMBLY	1,1,1	N.L.A. ORDER A-32177A2 RECTI	
8	13	26993	LOCKWASHER, RECTIFIER MO	1,1,1		
9	11	21929	NUT, RECTIFIER MOUNTING S	1,1,1		
10	32	28052	SLEEVE, RUBBER - RECTIFIER H	1,,		
10	32	28052	SLEEVE, RUBBER - RECTIFIER H	,,3		
11	32	28373	SLEEVE, RUBBER - RECTIFIER S	2,,		
11	32	28373	SLEEVE, RUBBER - RECTIFIER S	,,3		
12	10	29852	SCREW, HARNESS AND STATOF	3,3,3		
13	11	29488	NUT, HARNESS AND STATOR LE	3,3,3		
14	50	30955	STARTER MOTOR ASSEMBLY	1,1,1		
15		31057	PLATE, SPACER - STARTER MO	1,1,1		
16	10	22698	SCREW, STARTER MOTOR TO C	2,2,2		
17	13	26993	LOCKWASHER, STARTER MOTO	2,2,2		
18		27026	BRACKET, SUPPORT - STARTER	1,1,1		
19	12	24664	WASHER, THRU BOLT - BRACKE	1,1,1		
20	13	26992	LOCKWASHER, THRU BOLT - BR	2,2,2		
21	11	20890	NUT, THRU BOLT - BRACKET TO	2,2,2		
22		25596	CABLE, WIRE - STARTER TO STA	1,1,1		
23	54	20534	CLAMP, LOWER CABLE - START	1,1,1		
24	10	29197	SCREW, WIRING HARNESS GRC	1,1,1		
25		28937	SOLENOID, STARTER	1,,		
25		32268	SOLENOID, STARTER	,,1		
25		32445	SOLENOID, STARTER	,,1	ON MERC 700E-2 ENGINES STA #	#
26	13	26993	LOCKWASHER, SOLENOID TERM	2,2,2		
27	11	20083	NUT, SOLENOID TERMINAL (5/1)	2,2,2		
28	13	26996	LOCKWASHER, SOLINOID TERM	2,2,2		
29	11	20645	NUT, SOLENOID TERMINAL (#10	2,2,2		
30	10	29238	SCREW, SOLENOID TO STARTEI	2,,		
30	10	31208	SCREW, SOLENOID TO STARTEI	,,2,2		
31	54	23567	CLAMP, WIRING HARNESS TO S	1,,		
31	54	22627	CLAMP, WIRING HARNESS TO S	,,1,1		
32		22789	"D" WASHER, HARNESS CLAMP	1,1,1		
33	10	26548	SCREW, HARNESS CLAMP FAST	1,1,1		
34		28714	BLOCK, TERMINAL UPPER FLI	1,1,1		