



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	393	1282A16	DISTRIBUTOR ASSEMBLY, COM	1,1,1		
1	393	1282	HOUSING, PRIMARY	1,1,1		
2	22	25885A 1	ELBOW ASSEMBLY, VENT HOSE	1,1,1		
3	393	1504A 5	BREAKER ASSEMBLY, COMPLE	2,2,2		
4	16	29230	STUD, PRIMARY LEAD AND T	2,2,2		
5	11	29236	NUT, PRIMARY LEAD FASTEN	2,2,2		
6	393	1586	GROMMET, PLASTIC - BREAK	2,2,2		
7	12	26439	WASHER, BREAKER PIVOT F	2,2,2		
8	18	26953	COTTER PIN, BREAKER TO F	2,2,2		
9	393	1287A 2	CAM WICK AND HOLDER ASS	2,2,2		
10	10	20597	SCREW, BREAKER HOLDER	2,2,2		
11	393	1283	CONDENSER	2,2,2		
12	10	29434	SCREW, CONDENSER TO HOU	2,2,2		
13	393	1656	WIRE, PRIMARY GROUND	1,1,1		
14	30	26379	BEARING, BALL - CAM SHAFT	2,2,2		
15	393	1779A 2	SHAFT ASSEMBLY - DISTRIBU	1,1,1		
16	23	28933	BUSHING, DISTRIBUTOR CAM	1,1,1		
17	25	26543	"O"RING, CAM SHAFT	1,1,1		
18	17	25319	PIN, ROLL - CAM SHAFT	1,1,1		
19	13	26917	WASHER, WAVE - BALL BEARII	2,2,2		
20	393	1278	ADAPTOR, HOUSING TO DISTR	1,1,1		
21	27	26412	GASKET, HOUSING TO ADAPTI	1,1,1		
22	10	29180	SCREW, ADAPTOR TO HOUSIN	4,4,4		
23	393	1280A 1	ROTOR, DISTRIBUTOR	1,1,1		
24	27	36268	GASKET, DISTRIBUTOR CAP T	1,1,1		
25	393	1927A 5	DISTRIBUTOR CAP ASSEMBLY	1,1,1		
26	393	1293A 1	BRUSH AND SPRING ASSEM	1,1,1		
27	22	25885	ELBOW, VENT HOSE - DISTR	1,1,1		
28	393	F1277	SIDE INLET ASSEMBLY	1,1,1		
29	393	1292A 1	BRUSH AND SPRING ASSEM	1,1,1		
30	27	26447	GASKET, SIDE INLET TO DISTR	1,1,1		
31	10	29167	SCREW, SIDE INLET TO DISTR	2,2,2		
32	10	29158	SCREW, DISTRIBUTOR CAP TO	2,2,2		
33	14	31811	TAB WASHER, DISTRIBUTOR C	2,2,2		
34	393	1621A 1	HIGH TENSION CABLE ASSEM	1,1,1		
35	393	1622A 1	HIGH TENSION CABLE ASSEM	1,1,1		
36	393	1275	SLEEVE, TERMINAL END COV	2,2,2		
37		20121	CONNECTOR, HIGH TENSION	2,2,2		
38	25	26547	GROMMET, HIGH TENSION C	2,2,2		
39		26460A 1	SPARK PLUG LEAD ASSEMBLY	3,3,3		
40		26452A 1	SPARK PLUG LEAD ASSEMBLY	3,3,3		