



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1,1,1		
2	12	26617	WASHER, FLYWHEEL NUT	1,1,1		
3	28	20094	KEY, FLYWHEEL DRIVE	1,1,1		
4	212	1424A 4	FLYWHEEL ASSEMBLY	1,1,1		
5		29788	FLANGE, FLYWHEEL PULLEY	1,1,1		
6		30306	PULLEY, FLYWHEEL	1,1,1		
7	17	26618	PIN, DOWEL - PULLEY TO FLYW	1,1,1		
8		29787	HUB, FLYWHEEL PULLEY	1,1,1		
9	50	25263	RATCHET, FLYWHEEL	1,1,1		
10	10	31208	SCREW, RATCHET TO FLYWHEEL	3,3,3		
11	398	2035	STATOR, ALTERNATOR	1,1,1		
12		30050	TERMINAL, STATOR LEAD WITH	2,2,2		
13	10	29283	SCREW, STATOR TO UPPER EN	4,4,4		
14	54	24836	CLIP, STATOR LEAD TO EXHAUS	1,1,1		
15		22789	"D" WASHER, CLIP FASTENING	1,1,1		
16	10	30009	SCREW, STATOR LEAD CLIP FA	1,1,1		
17	54	22783	"S" CLIP, STATOR LEAD TO BOT	3,3,3		