



			Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30269A 2	FUEL PUMP ASSEMBLY, UPPER	1,1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2,2		
3	21	30430	VALVE, CHECK - FUEL PUMP	2,2,2		
4		23004	RETAINER, CHECK VALVE	1,1,1		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2,2		
6	27	24863	GASKET, FUEL PUMP	2,2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1,1		
8		29178A 2	FUEL PUMP ASSEMBLY, LOWER	1,1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2,2		
3	21	30430	VALVE, CHECK	2,2,2		
4		23004	RETAINER, CHECK VALVE	1,1,1		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2,2		
6	27	24863	GASKET, FUEL PUMP	2,2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1,1		
9		29044	COVER, FUEL PUMP	2,2,2		
10	27	30276	GASKET, FUEL PUMP COVER	2,2,2		
11	10	29126	SCREW, FUEL PUMP MOUNTING	4,4,4		
12	10	29029	SCREW, FUEL PUMP MOUNTING	2,2,2		
13	32	30035	FUEL LINE, UPPER PUMP TO LO	1,1,1		
14	22	22995	ELBOW, UPPER FUEL PUMP OU	1,1,1		
15	22	22946	SLEEVE, RUBBER	1,1,1		
16	11	22948	NUT, ELBOW	1,1,1		
17	32	29324	FUEL LINE, LOWER PUMP OUTL	1,1,1		
18	22	23595	CONNECTOR, LOWER FUEL PUM	1,1,1		
19	22	24690	ELBOW, FUEL PUMP OUTLET	1,1,1		
20	32	30036	FUEL LINE, ADAPTOR TO LOWE	1,1,1		
14	22	22995	ELBOW, M LOWER FUEL PUMP II	1,1,1		
15	22	22946	SLEEVE, RUBBER	1,1,1		
16	11	22948	NUT, ELBOW	1,1,1		
21		30186	ADAPTOR, CHECK UNIT (FUEL LI	1,1,1		
22		30187	STEM, CHECK UNIT ADAPTOR	1,1,1		
23	25	20415	"O" RING, ADAPTOR STEM	1,1,1		
24	24	30189	SPRING, ADAPTOR STEM	1,1,1		
25		30188	CUP WASHER, ADAPTOR	1,1,1		
26	10	20784	SCREW, ADAPTOR TO BOTTO	2,2,2		
27	11	20184	NUT, ADAPTOR FASTENING SCF	2,2,2		
28	32	30040	FUEL LINE, CENTER TO LOWER	1,1,1		
29	32	30038	FUEL LINE, UPPER TO CENTER	1,1,1		
30	22	25956	TEE, CENTER AND LOWER CAR	2,2,2		
31	32	32480	FUEL LINE, UPPER FUEL PUM	1,1,1		