



15156

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42968T	PLATE, Ignition	1		
2	332	7778A	SWITCH BOX	1		
3	10	69079	SCREW, (#10-16 x .440), Switch B	1		
4	10	40007110	SCREW, (M5 X 30), Switch Box	2		
5	23	94304	SPACER, Switch Box Screw	2		
6	11	45076	NUT, (#10-32), Switch Box Termi	9		
7	84	41592A	HARNESS ASSEMBLY, Primary	1		
8	84	813715A	CABLE, High Tension	1		
9	85	63709A	BOOT KIT, Spark Plug	3		
10	33	97182	SPARK PLUG	3		
10	33	14103570	SPARK PLUG, Belgium, Canada	3		
11	10	40113	SCREW, Ignition Plate	3		
12	339	7370A13	IGNITION COIL ASSEMBLY	3		
13	11	45076	NUT, (#10-32), Ignition Coil Termi	6		
14		43542	COVER, Ignition Coil	1		
15	10	40007115	SCREW, (M5 X 55), Ignition Coil Cc	6		
16	12	89302	WASHER, (.203 x .406 x .040), Coi	6		
18	10	40056107	SCREW, (M5 X 16), Rectifier	2		
19	11	45076	NUT, (#10-32), Rectifier Terminal	2		
20		58124A28	MERCURY SWITCH ASSEMBLY	1		
21	10	40056107	SCREW, (M5 X 16), Mercury Switc	1		
22		45315	TERMINAL BLOCK	2		
23	10	48408	SCREW, (#10-16 x .500), Terminal	4		
24	84	41591A	WIRING HARNESS ASSEMBLY, E	1		
25	88	79091	FUSE, (20 Ampere)	1		
26	84	88439A	BATTERY CABLE, Positive	1		
26	84	88439A	BATTERY CABLE, Negative	1		
27	89	96158	SOLENOID STARTER	1		
28	10	40007106	SCREW, (M5 X 13), Starter Soleno	2		
29	12	40023	WASHER, Starter Solenoid Screw	2		
30	84	88807A	WIRE, (3.50 Inches) Black, Soleno	1	(Quantity Of Two On Oyster)	
31	13	26992	LOCKWASHER, (.250)	2	(Starter Solenoid Terminal)	
32	11	64015	NUT, (#8-32), Starter Solenoid Ter	2		
33	11	26419	NUT, (#8-32), Starter Solenoid Terr	2		
34	84	88808A18	WIRE, (3.00 Inch), Rectifier To Sol	1		
35		12417T	COVER, Ignition	1		
36	10	40007114	SCREW, (M5 X 50), Ignition Cover	3		
37	12	89302	WASHER, (.203 x .406 x .040), Ign	3		
38		13473	FUSE HOLDER	1		
39		68878A	ALARM HORN AND WIRE ASSEM	1		
40		68879	COVER, Electric Horn	1		