



Quicksilver Lubrication/Sealant Application Points

-  Loctite 35 (92-59328-1)
-  Loctite Master Gasket (92-12564-1)

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	876	8947A55	CYLINDER BLOCK ASSEMBLY	1		1,2
2	10	40096 80	SCREW	8		2
3	10	814776	ADJUSTING SCREW	1		2
4	11	40021 2	NUT	1		2
5		42942	CAP	1		2
6	21	42623 1	CHECK VALVE (PRESS-IN)	1		1,2
7		813801A 1	CARRIER ASSEMBLY	1		2
8	21	42657A 3	CHECK VALVE	2		1,2
9	17	67296	DOWEL PIN (BEARING RACE)	3		2
10	17	43044	DOWEL PIN	1		2
11	16	821676A 1	SCREW	8	(DESIGN I)	1
12	16	821676 1	STUD	8	DESIGN II	2
13	12	45175	WASHER	8	DESIGN II	2
14	11	13914	NUT	8	DESIGN II	2
15		76867	COVER (BOTTOM)	1		2
16	10	817427 50	SCREW	4		2
17		42884 1	COVER (TOP)	1		2
18		65848	CARRIER	1	USE WHERE APPLICABLE	2
19	25	64872	GROMMET	1	USE WHERE APPLICABLE	2
20		86596T	POPPET VALVE	1		2
21	24	18336	SPRING	1		2
22		824703A 1	PLUG KIT	1		2
23	32	99130122	TUBING (19 IN.)	1		2
24	10	821273 35	SCREW	12		2
25		12621	COVER	1	NON OIL INJECTION	2
26	27	12620 1	GASKET	1	NON OIL INJECTION	2
27	10	821045 12	SCREW	2	NON OIL INJECTION	2
28	12	40023 14	WASHER	2	NON OIL INJECTION	2
29	16	816194 6	STUD	2		
30	12	49221	WASHER	2		
31	11	816872	NUT	2		
-		809837A97	POWERHEAD	1		1