
 


**Quicksilver Lubrication/Sealant
 Application Points**

-  Loctite 35 (92-59328-1)
-  Loctite Master Gasket (92-12564-1)

Parts List					
Ref	Class	Part	Description	Qty	Footnote
32	1034	9003A 2	COVER ASSEMBLY	1	2
33	27	43005 7	GASKET	1	4,2
34	22	32802 1	PIPE PLUG	1	
35		823462	LIFTING EYE	1	
36		14586	THERMOSTAT	1	2
37	27	62386	GASKET	1	4,2
38	27	43006 5	GASKET	1	4,2
39		42885 3	COVER	1	2
40	10	12896	SCREW-AIR VENT HOLE	1	
41	10	821273 35	SCREW (35 MM)	5	2
42	10	69570	SCREW	1	2
43	12	94182	WASHER	1	2
44		64877	DIAPHRAGM	1	2
45	10	48409	SCREW	2	
46	12	56681	WASHER	1	
47		44290	RETAINER	1	
48		78799	TEMPERATURE SENDER	1	(ELECTRIC)
48		78799 2	TEMPERATURE SENDER	1	(MANUAL)
49	10	821273 35	SCREW	14	2
50	54	814634	CLAMP	4	2
51		99162	BOOT	1	
52		14857A15	OIL WARNING MODULE	1	1
53		821889A31	REV LIMITER	1	(NON OIL INJECTION)
54	10	821300 50	SCREW (M6 X 1 X 50)	2	
54	10	40106 30	SCREW (M6 X 1 X 30)	2	
55	12	29245	WASHER	2	
56	84	823147A 6	HARNES- SPEED LIMITER	1	(NON OIL INJECTION)
57	84	11149A 8	HARNES ADAPTOR	1	
-	27	43004A90	GASKET SET	1	
-		809837A97	POWERHEAD	1	1