



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1655	7333A25	GEAR HOUSING ASSEMBLY (ME)	1		
-	1655	7333A41	GEAR HOUSING ASSEMBLY (MA)	1		
1	1655	7333A23	GEAR HOUSING ASSEMBLY (M)	1		
1	1655	7333A43	GEAR HOUSING ASSEMBLY (M)	1		
2	22	85822A 1	CONNECTOR ASSEMBLY, SP	1		
3	17	85500	DOWEL PIN	2		
4	16	57921	STUD, GEAR HOUSING (4")	1		
5	16	57920	STUD, GEAR HOUSING (2-1/2")	2		
6	16	56297	STUD, WATER PUMP (3-3/8")	1		
7	16	69501	STUD, WATER PUMP (3-1/8")	2		
8	31	32898	BEARING, ROLLER - DRIVE S	1		
9	45	42646	DRIVE SHAFT	1		
10	43	75316	PINION GEAR, DRIVE SHAFT	1		
11	11	35921	NUT, PINION GEAR TO DRIVE	1		
12	23	70412	SPACER, BEARING TO WATER	1		
13	15	57007A 1	SHIM, BEARING TO WATER PL	AR		4
14	31	69220	ROLLER BEARING, DRIVE SHA	1		
15	27	85610	GASKET, WATER PUMP TO GE	1		2,8,7
16	25	33145	"O" RING, WATER PUMP	1		2,8,7
17	46	96146A 5	WATER PUMP BASE ASSEMBL	1		8
18	26	94038	OIL SEAL, WATER PUMP BAS	1		8,7
19	26	79884	OIL SEAL, WATER PUMP BAS	1		8,7
20	27	85608	GASKET, LOWER - WATER PUI	1		2,8,7
21		32435	PLATE, FAEC - WATER PUMP	1		8
22	27	85609	GASKET, UPPER - WATER PUK	1		2,8,7
23	46	96148A 1	WATER PUMP BODY ASSEMBL	1		8
24		48752	INSERT, WATER PUMP	1		8
25	26	38970	SEAL, RUBBER - WATER INLI	1		2,8,7
26	47	89984	IMPELLER, WATER PUMP	1		8
27	28	56654	KEY, IMPELLER DRIVE	1		8
28	10	96411	SCREW, WATER PUMP	1		8
29	12	20583	WASHER, WATER PUMP SCRE	1		
30	12	29245	WASHER, WATER PUMP SCREW	2		
31	11	13438	NUT, WATER PUMP FASTENIN	2		
32	12	36001	WASHER, WATER PUMP STUC	1		
33	11	35814	NUT, WATER PUMP STUD	1		
34	25	30271	RING, RUBBER DRIVE SHAFT	1		2,8,7
35	23	29804	SLEEVE, GUIDE - WATER INLE	1		
36		37641	SEAL, EXHAUST TUBE	1		2
37		38051T	PLATE, SUPPORT - EXHAUST	1		
38		76062A 1	SHAFT ASSEMBLY, SHIF	1		