



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	66015	STARTER MOTOR	1		
2		56703	COLLAR, RUBBER-STARTER MO	2		
3	23	56774	SPACER, COLLAR TO BRACKET	1		
4		57247	SOTP, RUBBER-STARTER MOTC	2		
5	84	93389A 8	WIRE, MOTOR TO SOLENOID (YE	1		
6	13	26992	LOCKWASHER, STARTER MOTO	1		
7	11	64015	NUT, STARTER MOTOR TERMIN	1		
8	10	69035	SCREW	1	WIRING HARNESS TO STARTEI	
9		62351A 1	RECTIFIER	1		
10	10	37656	SCREW, RECTIFIER TO PLATE (E	2		
11	11	45076	NUT, RECTIFIER TERMINAL	3		
12	89	96054	STARTER SOLENOID	1		
13	13	26995	LOCKWASHER, SOLENOID TERM	2		
14	11	26419	NUT, SOLENOID TERMINAL (#8-	2		
15	13	26992	LOCKWASHER, SOLENOID TERM	2		
16	11	94330	NUT, SOLENOID TERMINAL (1/4-	2		
17	10	28635	SCREW, SOLENOID TO BOTTOM	2		
18	13	26992	WASHER, SOLENOID SCREW	2		
19	85	97861	INSULATOR, STARTER SOLENO	1		
20	84	93388A 1	WIRE, GROUND (BLACK)	1		
21	84	88439A 3	BATTERY CABLE (POSITIVE)	1		
21	84	88439A 4	BATTERY CABLE(NEGATIVE)	1		
22	84	96233A 2	WIRING HARNESS	1		
23	88	79091	FUSE	1		
25	54	88608	CLAMP, WIRING HARNESS	1		
26	10	28636	SCREW, WIRING HARNESS CLAI	2		
27		89047	BRACKET, WIRING HARNESS	1		
28	10	32228	SCREW, WIRING HARNESS BRA	2		
29	12	38833	WASHER, BRACKET SCREW	2		
30		88751	CLAMP, WIRING HARNESS	1		
31	10	28636	SCREW, WIRING HARNESS CLAI	1		
32	12	20533	WASHER, CLAMP SCREW	1		