



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	19	45307	PLUG, FLYWHEEL PULLER THR	1		
2	11	52901	NUT, FLYWHEEL	1		
3	12	68229	WASHER, FLYWHEEL NUT	1		
4	248	8722A 6	FLYWHEEL ASSEMBLY	1		
5	10	68997	SCREW	8	PLATE/HUB TO FLEXIBLE PLAT	
6	10	32417	SCREW, FLEXIBLE PLATE TO F	8		
7	10	90332	PLATE, SWITCH BOX	1		
8	25	57009	GROMMET, SWITCH BOX	3		
9	10	59645	SCREW	3	SWITCH BOX PLATE TO CYLINE	
10	12	56720	WASHER, SWITCH BOX PLATE E	3		
11	54	47483	"J"CLIP, SWITCH BOX WIRES AN	1		
12	332	5772A 2	SWITCH BOX ASSEMBLY	1		
13	10	20619	SCREW, SWITCH BOX TO PLATE	4		
14	84	65999A 5	WIRE ASSEMBLY	2		
15	11	45076	NUT, SWITCH BOX TERMINAL	13		
16		58124A19	MERCURY SWITCH ASSEMBLY	1		
17	10	37571	SCREW, MERCURY SWITCH TO	1		
18	86	66986	TERMINAL BLOCK	1		
19	10	20646	SCREW, TERMINAL BLOCK TO P	1		
20	10	42813	SCREW, WIRE TO TERMINAL BL	1		
21	54	22875	CLIP, WIRES AND HARNESS	2		
22	10	35519	SCREW, CLIP TO PLATE (3/8")	2		
23		69205	"D" WASHER, CLIP SCREW	2		
24	54	47483	"J" CLAMP, TRIGGER PLATE HAF	1		
25		73395	PLATE, MOUNTING-IGNITION CO	1		
26	10	28668	SCREW, MOUNTING PLATE TO C	3		
27	339	7370A13	IGNITION COIL ASSEMBLY	4		
28	11	45076	NUT, IGNITION COIL TERMINAL	8		
29		87554	COVER, IGNITION COIL	1		
30	10	88856	SCREW, COVER TO MOUNTING	5		
31	12	30164	WASHER, COVER SCREW	5		
32		77672	STRAP, PRIMARY HARNESS	1		
33	10	48408	SCREW, STRAP ATTACHING	2		
34	398	5454A26	STATOR ASSEMBLY	1		
35	10	75840	SCREW, STATOR TO UPPER EN	4		
36		96453A 2	TRIGGER PLATE ASSEMBLY	1		
37	84	77617	HARNESS, PRIMARY (CYLINDER	1		
38	84	77618	HARNESS, PRIMARY (CYLINDER	1		
39	54	39844	CLAMP, HARNESS ATTACHING	1		
40	10	35519	SCREW, CLAMP TO CRANKCASE	1		
41		69205	"D" WASHER, HARNESS CLAMP	1		