



			Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote
1		99659A21	MANIFOLD ASSEMBLY (MERCUR	1		
1		99659A22	MANIFOLD ASSEMBLY (MARINEF	1		
2	22	99616	PIPE PLUG, MANIFOLD	1		
3		41493A 3	TRIM CYLINDER ASSEMBLY (ME	1		
3		41493A 4	TRIM CYLINDER ASSEMBLY (MA	1		
4		41492A 1	GUIDE ASSEMBLY	1		
5	25	41478A 1	REPAIR KIT	1		
6		41482A 2	CHECK VALVE KIT	1		
7		99638A 1	GUIDE ASSEMBLY, TRIM ROD	2		
8		43397A 3	PISTON AND ROD ASSEMBLY, P	1		
9	35	12184A 1	TRIM FILTER ASSEMBLY	1		
10		43398A 3	PISTON AND ROD ASSEMBLY, S	1		
11	17	13794	GROOVE PIN, TRIM CYLINDER (L	1		
12		99660A 1	VALVE ASSEMBLY	1		
13	10	40003 27	SCREW, COVER	4		
14	12	43450	WASHER, COVER SCREW	4		
15		99642	COVER, MANIFOLD	1		
16	25	48462A 1	"O" RING KIT	1		
17	19	99609A 1	PLUG ASSEMBLY	1		
18		99641A 1	SHAFT ASSEMBLY	1		
19	22	99616	PLUG PIPE, SHAFT	2		
20	10	40003 27	SCREW, PUMP AND MOTOR	2		
21	13	40025 6	LOCKWASHER	2		
22		99186T	PUMP AND MOTOR	1		
23		99625	SHAFT, UPPER	1		
24		43396A 1	ANODE ASSEMBLY	1		
25	10	40003 32	SCREW, ANODE	2		
26	12	29245	WASHER, ANODE SCREW	2		
27		99630	STRIKER PLATE, TRIM SHAFT	2		
28	13	58643	LOCKWASHER	2		
29	11	46335	NUT	2		
30	84	99695A 1	CONTROL HARNESS ASSEMBLY	1		
31	84	79139A17	WIRE ASSEMBLY (11-1/2"-RED)	1		
31	84	87379A14	WIRE ASSEMBLY (2-3/4"-RED)	1		
31	84	88807A 8	WIRE ASSEMBLY (3-1/2"-BLACK)	2		
32	89	96158	STARTER SOLENOID	2		
33	10	41508	SCREW, STARTER SOLENOID	3		
34	11	26419	NUT, SOLENOID TERMINAL (8-32	4		
35	13	26992	LOCKWASHER, SOLENOID TERM	4		
36	11	94330	NUT, SOLENOID TERMINAL (1/4	4		
37	95	92861	INSULATOR, STARTER SOLENO	2		