



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2158	8708 1	COWL, BOTTOM MERCURY	1		
1	2158	8708T 6	COWL, BOTTOM MARINER	1		
2		74303	COVER, AIR INLET	1		
3	10	62568	SCREW, COVER TO BOTTOM CO	4		
4	12	30164	WASHER, COVER SCREW	4		
5	27	73646	GASKET, BOTTOM COWL	1		2
6		39616	BOOT, CONTROL CABLES-BOTT	1		
7		37637	BOOT, FUEL CONNECTOR-BOTT	1		
8	32	99127109	HOSE, TELL TALE (14-3/4")	1		
9		52889	NOZZLE, TELL TALE HOSE TO B	1		
10	10	48408	SCREW, TELL TALE NOZZLE TO	1	(1/2")	
11	22	78279	ELBOW, TELL TALE HOSE TO CY	1		
12		60304A54	SHIFT SHAFT ASSEMBLY, UPPEF	1		
13	23	26856	BUSHING, SHIFT SHAFT	1		
14		73402	SHIFT LINK	1		
15	12	35462	WASHER, LINK ROD	2		
16	11	36069	NUT, LINK ROD	2		
17	13	29720	WASHER, WAVE-LINK ROD	1		
18	24	20099	SPRING, LINK ROD TO GUIDE BL	1		
19		37896	GUIDE BLOCK, LINK ROD	1		
20		52732A 6	BRACKET, ANCHOR-CONTROL C	1		
21		98889	LATCH, NEW STYLE	1		
22	10	42975	SCREW, LATCH NEW STYLE	2		
23		39618	LEVER, NYLON-SHIFT CABLE LO	1		
24	17	47175	PIN, LOCKING LEVER AND COVER	3	OLD STYLE	
25		90211	COVER, NYLON-SHIFT CABLE OL	1		
26		65799T	LINK, LOCKING LEVER TO COVER	1		
27		39519	CAP, BARREL RETAINER-ANCHC	1		
28	10	35386	SCREW, ANCHOR BRACKET TO	3	(1")	
29		52100	WEAR PLATE, LINK ROD	1		
30		38279	LATCH, CONTROL CABLE FASTE	1	ANCHOR BRACKET	