



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	50	66015	STARTER MOTOR	1			
2		56703	COLLAR, RUBBER-STARTER MO	2			
3	23	56774	SPACER, COLLAR TO BRACKET	1			
4		57247	SOTP, RUBBER-STARTER MOTC	2			
5	84	93389A 8	WIRE, MOTOR TO SOLENOID (YE	1			
6	13	26992	LOCKWASHER, STARTER MOTO	1			
7	11	64015	NUT, STARTER MOTOR TERMIN	1			
8	10	69035	SCREW	1	WIRING HARNESS TO STARTEI		
9		62351A 1	RECTIFIER	1			
10	10	37656	SCREW, RECTIFIER TO PLATE (E	2			
11	11	45076	NUT, RECTIFIER TERMINAL	3			
12	89	96054	STARTER SOLENOID	1			
13	13	26995	LOCKWASHER, SOLENOID TERM	2			
14	11	26419	NUT, SOLENOID TERMINAL (#8-	2			
15	13	26992	LOCKWASHER, SOLENOID TERM	2			
16	11	94330	NUT, SOLENOID TERMINAL (1/4-	2			
17	10	28635	SCREW, SOLENOID TO BOTTOM	2			
18	13	26992	WASHER, SOLENOID SCREW	2			
19	85	97861	INSULATOR, STARTER SOLENO	1			
20	84	93388A 1	WIRE, GROUND (BLACK)	1			
21	84	88439A 3	BATTERY CABLE (POSITIVE)	1			
21	84	88439A 4	BATTERY CABLE(NEGATIVE)	1			
22	84	96233A 2	WIRING HARNESS	1			
23	88	79091	FUSE	1			
25	54	88608	CLAMP, WIRING HARNESS	1			
26	10	28636	SCREW, WIRING HARNESS CLAI	2			
27		89047	BRACKET, WIRING HARNESS	1			
28	10	32228	SCREW, WIRING HARNESS BRA	2			
29	12	38833	WASHER, BRACKET SCREW	2			
30		88751	CLAMP, WIRING HARNESS	1			
31	10	28636	SCREW, WIRING HARNESS CLAI	1			
32	12	20533	WASHER, CLAMP SCREW	1			