



2111

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
30	91	74951	SPANNER WRENCH	1		
31		NSS	NOT SOLD SEPARATE	1	Lock Ring Pliers (SNAP-ON SRP-4)	
32		NSS	NOT SOLD SEPARATE	1	Expanding Rod (SNAP-ON CG 41-12)	
33		NSS	NOT SOLD SEPARATE	1	Collet (SNAP-ON CG 41-12)	
34	91	63209	HEAT LAMP	1		
35	91	12349A 2	LOCATION TOOL, Pinion	1		
36	91	13945	INSTALLATION TOOL, Bearing	1		
37	91	13949	DRIVER, Oil Seal	1		
38	91	14308T02	BEARING RACE TOOL	1		
39	91	14309T02	INSTALLATION TOOL, Bearing	1		
40	91	14310T 1	WEAR SLEEVE INSTALLATION T	1		
41	91	14311A04	TOOL, Preload	1		
42	91	15755T	MANDREL	1		
43	91	19660 1	INDICATOR TOOL, Backlash	1		
44	91	31106T	MANDREL, Bearing Driver Cup	1		
45	91	31108T	DRIVER, Oil Seal	1		
46	91	36569T	DRIVEHEAD TOOL	1		
47	91	804776A 1	DRIVESHAFT HOLDING TOOL	1		
48	91	31229	SHAFT	1		
49	91	34569A 1	PULLER ASSEMBLY, Slide Hamme	1		
50	91	37323	DRIVER ROD	1		
51	91	37241	PULLER PLATE	1		
52	91	37350T	MANDREL	1		
53	91	46086A 1	PULLER JAW ASSEMBLY	1		
54	91	58222A 1	DIAL INDICATOR TOOL	1		
55	91	78473	INDICATOR TOOL, Backlash	1		
56	91	85716	PULLER BOLT	1		
57	91	83155	ADAPTER KIT, Dial Indicator	1		
58	91	83165T	PULLER ASSEMBLY	1		
59	91	856875A 1	BEARING INSTALLATION TOOL	1		
60	91	877321A 1	BEARING INSTALLATION TOOL	1		
61	91	881239A 1	EMISSIONS PROBE	1	(BODENSEE)	
62	91	880177	SCRENCH, (10mm), 10 MM	1		