



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	251	6194A1	FLYWHEEL ASSEMBLY (MANUAL			
1	251	6105A1	FLYWHEEL ASSEMBLY (ELECTR			
1	251	6105A3	FLYWHEEL ASSEMBLY (BELGIUM			12
2	28	50094	KEY, FLYWHEEL DRIVE			
3	12	36245	WASHER, FLYWHEEL NUT			
5	339	5748A	COIL ASSEMBLY, IGNITION			
4	11	20696	NUT, FLYWHEEL			
6	13	26996	LOCKWASHER, IGNITION COIL T			
7	11	4506	NUT, IGNITION COIL TERMINAL			
8		66355	COVER, IGNITION COIL			
9	10	72074	SCREW, COIL COVER TO REAR S		(4 5/8")	
10	11	20110	NUT, COIL COVER SCREW			
11	84	63212A2	LEAD ASSEMBLY, HIGH TENSION			
12	332	2854	NIPPLE, IGNITION COIL			
13	85	71006A1	PROTECTOR ASSEMBLY, SPARK			
14	33	58194	SPARK PLUG (AC#V40FFK)			