



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		53238A 3	FUEL PUMP ASSEMBLY	1		
2	21	30430A 2	CHECK VALVE ASSEMBLY	1		
3		53245A 1	DIAPHRAGM KIT, FUEL PUMF	1		4
4			GASKET, FUEL PUMP TO B,	1		4
5			GASKET, FUEL PUMP	2		4
6		53242	BASE, FUEL PUMP	1	SERIAL 00000000-02721150	
6		53241	BASE, FUEL PUMP	1	SERIAL 02810637-09999999	
7		53239	COVER, FUEL PUMP	1	SERIAL 00000000-02631374	
7		54066	COVER, FUEL PUMP	1	SERIAL 02631375-09999999	
8	22	54064	CONNECTOR, FUEL PUMP COVE	1	SERIAL 00000000-02721150	
9	22	54090	ELBOW, PUMP OUTLET	1	SERIAL 02810637-09999999	
10	10	32627	SCREW, FUEL PUMP TO BASE (1	4		
11	12	20128	WASHER, FUEL PUMP SCREW	4		
12	22	53246	ELBOW, FUEL PUMP TO CARBUF	1	SERIAL #2721150 AND BELOW	
13	32	56341	FUEL LINE, FUEL PUMP TO CARF	1	SERIAL #2810637 AND UP	
14	32	52742A 1	HOSE, PRESSURE - CYLINDER B	1		
15	22	33373	ELBOW, PRESSURE HOSE TO C	1	SERIAL #2721150 AND BELOW	
15	22	53553	ELBOW, PRESSURE HOSE TO C	1	SERIAL #2810637 AND UP	
16	54	20387	CLAMP, PRESSURE HOSE TO EL	2		
17	32	53247	FUEL LINE, FUEL PUMP TO ADAF	1	SERIAL #2721150 AND BELOW	
17	32	39485	FUEL LINE, FUEL PUMP TO ADAF	1	SERIAL #2810637 AND UP	
18		32454	ADAPTOR, CHECK UNIT (FUEL LI	1		
19		39052	SEAL, ADAPTOR TO BOTTOM CC	1		
20	10	24233	SCREW, ADAPTOR TO BOTTOM	2	SERIAL #2958118 AND BELOW	
20	10	22958	SCREW, ADAPTOR TO BOTTOM	2	SERIAL #3016581 AND UP	
21	24	28357	SPRING, TENSION - ADAPTOR S	2		
22	11	20110	NUT, ADAPTOR FASTENING SCF	2	SERIAL 00000000-02958118	
23	10	29200	SCREW, FUEL PUMP TO ANCHO	2	SERIAL 02810637-09999999	