



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	2123	3668	COWL, TOP	1		
2		39080	BLANKET, SOUND ABSORBING-1	1		
3		39071	BLANKET, SOUND ABSORBING-1	1		
4	25	39086	GROMMET, COWL LATCH-TOP C	1		
5	2128	2667A 9	COVER ASSEMBLY, FRONT	1	SERIAL 00000000-02721150	
5	2128	2667A 8	COVER ASSEMBLY, FRONT	1	SERIAL 02810637-09999999	
6		39039	STRIP, RUBBER-FRONT COVER	1		
7	23	39578	SPACER, FRONT COVER STUD	2		
8	11	20361	NUT, FRONT COVER STUD	2		
9		39880A 2	STARTER HOUSING ASSEMBLY	1	SERIAL 00000000-02958118	
9		58114A 2	STARTER HOUSING ASSEMBLY	1	SERIAL 03016581-09999999	
10		57821	INSERT, ROPE GUIDE-STARTER	1		
11		39043	SEAL, STARTER HOUSING TO	1		
12	10	46962	SCREW, STARTER HOUSING TO	2		
12	10	34439	SCREW, HOUSING TO BLOCK (3-	1	SERIAL 00000000-02721150	
12	10	56354	SCREW, HOUSING TO BLOCK (1-	1	SERIAL 02810637-09999999	
13		30976	PULLEY, STARTER CABLE	1	SERIAL 00000000-02721150	
13		55860	PULLEY, STARTER CABLE	1	SERIAL 02810637-09999999	
14	10	28789	SCREW, CABLE PULLEY TO STA	1		
15	12	22887	WASHER, CABLE PULLEY SCREW	1		
16	23	30977	SPACER, CABLE PULLEY	1		
17		39084	PLATE, SEAL-TOP COWL	2		
18		39093	SEAL, TOP COWL PLATE	2		
19	10	30009	SCREW, PLATE AND SEAL TO TI	4		
20		39027	SHIELD, TOP COWL-REAR	1		
21	10	20646	SCREW, REAR SHIELD TO TOP (3		
22	13	26996	LOCKWASHER, REAR SHIELD SI	3		
23		56377	SEAL, TOP COWL (42-1/8")	1		
24		39088A 1	COWL LATCH ASSEMBLY, TOP C	1		
25	24	59174	SPRING, COMPRESSION-COWL	2		
26	17	39095	PIN, ROLL-SPRING TO COWL L	2		
27	10	34439	SCREW, COWL LATCH TO TOP C	3		
28	14	20165	TAB WASHER, SHEAVE SHAFT N	1		
29	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1		
30		20155	RETAINER, STARTER SPRING	1		
31	24	29340A 1	SPRING, STARTER REWIND	1		
32	23	28912	BUSHING, STARTER SPRING GL	1		
33	50	30594A 1	STARTER SHEAVE ASSEMBLY	1		
34	17	22896	PIN, RETAINER-STARTER CAB	1		
35	13	36206	WASHER, WAVE-STARTER PAW	3		
36		20596	PAWL, STARTER	2		