



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	239	4473A 1	FLYWHEEL ASSEMBLY	1		
2	28	20094	KEY, FLYWHEEL DRIVE	2		
3	25	36284	"O" RING, FLYWHEEL NUT	1		2, 4
4	12	36282	WASHER, FLYWHEEL NUT	1		
5	11	20696	NUT, FLYWHEEL	1		
6	13	35629	WASHER, WAVE - BREAKER CAM	1		
7	336	4466	CAM, BREAKER	1		
8	336	4528A 1	COIL ASSEMBLY, IGNITION	2		
9	13	26996	LOCKWASHER, IGNITION COIL T	4		
10	11	45076	NUT, IGNITION COIL TERMINAL	4		
11		61532	COVER, IGNITION COIL	2		
12	10	61530	SCREW, COIL COVER TO REAR	6		
13	11	27164	NUT, COIL COVER SCREW	6		
14		47899A 9	LEAD ASSEMBLY, HIGH TENSION	2		
15	332	2854	NIPPLE, IGNITION COIL	2		
16		47604A 1	PROTECTOR ASSEMBLY, SPARK	2		
17	33	58194	SPARK PLUG (AC V40FFK)	2		
18		56352	BRACKET, COIL SUPPORT	1		
19	10	31294	SCREW, BRACKET TO CYLINDER	2		
19	10	56354	SCREW, BRACKET TO CYLINDER	1		
20	11	46887	NUT, BRACKET SCREW	2		