



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		60933A 2	ADAPTOR PLATE ASSEMBLY	1	SERIAL 00000000-#3488152	
1		63586A 2	ADAPTOR PLATE ASSEMBLY	1	SERIAL #3488153-09999999	
1		36554	WASHER, NYLON - WATER OU	1		
3	26	36556	SEAL, RUBBER - WATER OUTL	1		2, 4
4		39044	SEAL, RUBER - ADAPTOR PLA	1		
5	27	45748	GASKET, POWERHEAD TO AD	1		2, 4
6	10	22486	SCREW, ADAPTOR PLATE TO DI	1		
7	13	26992	LOCKWASHER, ADAPTOR PLATE	1		
8	27	39050	GASKET, ADAPTOR PLATE TO D	1		2, 4
9	2124	4637	COWL, BOTTOM (SERIAL AND B	1	SERIAL 00000000-#3488152	
9	2124	4900	COWL, BOTTOM	1	SERIAL #3488153-09999999	
10		56069	ANCHOR, LATCH - BOTTOM COW	1	SERIAL 00000000-#3488152	
10		39474	ANCHOR, LATCH - BOTTOM COW	1	SERIAL #3488153-09999999	
11	10	22483	SCREW, LATCH ANCHOR TO BO	2		
12	13	26992	LOCKWASHER, LATCH ANCHOR	2		
13	25	39054	GROMMET, CHOKE SHAFT - BOT	1	SERIAL 00000000-#3488152	
14		59100	COVER, AIR INTAKE - BOTTOM C	1	SERIAL 00000000-#3488152	
15	10	30009	SCREW, AIR INTAKE COVER TO	2	SERIAL 00000000-#3488152	
16		39058	SEAL, SHIFT HANDLE - BOTTOM	1		
17		39145	MOUNT, RUBBER - BOTTOM COW	1		
18		39144	MOUNT, RUBBER - BOTTOM COW	1		
19	10	59795	SCREW, RUBBER MOUNT TO BC	4		
20	11	46887	NUT, ADAPTOR PLATE TO RUBE	2		
21		39147	ADAPTOR, REAR MOUNT TO BO	1		
22	10	22486	SCREW, REAR MOUNT ADAPTO	2		
23	13	26992	LOCKWASHER, REAR MOUNT AI	2		
24		39146	MOUNT, RUBBER - BOTTOM COW	1		
25	13	26992	LOCKWASHER, REAR MOUNT	2		
26	11	46887	NUT, ADAPTOR PLATE TO REAF	2		
27		63648	ROD, COWL LATCH - BOTTOM CI	1		
28		39099	BRACKET, COWL LATCH ROD	1		
29	10	22486	SCREW, COWL LATCH BRACKET	1		
30	13	26992	LOCKWASHER, COWL LATCH BF	1		
31		39083	HANDLE, COWL LATCH ROD (PO	1		
32		39098	HANDLE, COWL LATCH ROD (ST	1		
33	23	60762	BUSHING, NYLON - COWL LATCH	2		
34	17	25319	PIN, ROLL - HANDLE TO COWL L	2		
35	32	34395A 1	TUBE, TELL TALE (11")	1		
36		56712	NOZZLE, TELL TALE	1		
37	10	34222	SCREW, TELL TALE NOZZLE TO	1		
38		59065A 1	STOP SWITCH ASSEMBLY	1		