



4723

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		850838T	INTAKE VALVE	2		5
2		850839T	EXHAUST VALVE	2		5
3		855959	SEAT, Valve Spring	4		5
4	24	850840	VALVE SPRING	4		5
5		822650	RETAINER	4		5
6	28	822651	KEY	8		5
7	26	822647	SEAL, Valve Stem	4		5,2
8		850841A 1	ROCKER ARM ASSEMBLY	4		5
9	10	825046	SCREW	4		5
10	11	826150	NUT	4		5
11		850842	ROCKER SHAFT	2		5
12		825451	COLLAR	3	SN# USA-0T178499 & Below	5
12		825451	COLLAR	1	SN# USA-0T178500/BEL-0P094E	5
13		880135	COLLAR	1	SN# USA-0T178500/BEL-0P094E	5
14		880134	COLLAR	1	SN# USA-0T178500/BEL-0P094E	5
15	24	825452	SPRING	3		5
16	24	825453	SPRING	1		5
-		802733A98	POWERHEAD	1	(Electric)	
-		802733A98	POWERHEAD	1	(Manual) SN# USA-0T178499 & B	
-		879783A01	POWERHEAD	1	(Manual) SN# USA-0T178500/BE	
-	27	835427A00	POWERHEAD GASKET SET	1		