



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42965A	1 BRACKET ASSEMBLY, COWL SE	1		
1		42965A	2 BRACKET ASSEMBLY, COWL SE	1		
2		18306	1 SEAL, BRACKET	2		
3		42935	1 SEAL	1		
4		42908	1 RESTRAINT	1		
5	10	40001	5 SCREW, RESTRAINT	1		
6	12	43423	1 WASHER, RESTRAINT SCREW	1		
7		42907	1 CONNECTOR, TELL TALE	1		
8	32	99129	76 HOSE, TELL TALE	1		
9		73498	1 STA-STRAP	1		
10		93264	1 HOUSING, HINGE	2		
11	10	40095	60 SCREW, HOUSING	4		
12	12	93853	8 WASHER, HOUSING SCREW	8		
13	12	53705	8 WASHER, HOUSING SCREW	8		
14	25	88033	4 GROMMET, HOUSING SCREW	4		
15	23	14395	4 BUSHING, HOUSING SCREW	4		
16	10	40001	20 SCREW, HOUSING TO BRACKET	2		
17	12	43423	2 WASHER, HOUSING SCREW	2		
18		42952T	1 BRACKET, SUPPORT (FRONT) (N	1		
18		42952T	6 BRACKET, SUPPORT (FRONT) (N	1		
19		67260	1 SEAL, CONTROL CABLES	1		
20	25	67272	2 GROMMET, BRACKET	2		
21		88621	1 RETAINER, CONTROL CABLES (F	1		
21		99447T	1 RETAINER, CONTROL CABLES (F	1		
22	10	40057	109 SCREW, RETAINER	2		
23	10	40111	35 SCREW, BRACKET	2		
24	12	93853	4 WASHER, BRACKET SCREW	4		
25	12	53705	4 WASHER, BRACKET SCREW	4		
26	25	88033	2 GROMMET, BRACKET	2		
27	23	14395	2 BUSHING, BRACKET SCREW	2		