 


**Quicksilver Lubrication/Sealant
 Application Points**

 Loctite 271 (Obtain Locally)

EXHAUST PLATE

Parts List								
Ref	Class	Part	Description	Qty	Comment	Footnote		
1		42954A	EXHAUST PLATE ASSEMBLY	1				
2	17	23784	DOWEL PIN	3				
3	10	40011151	SCREW (M8 X 35)	2				
3	10	40011158	SCREW (M8 X 70)	1				
4		44344	2 MOUNT	1				
5	10	40107 50	SCREW	4				
6	10	42974	SCREW	2				
7	12	93416	1 WASHER	2				
8	12	28421	WASHER	2				
9	11	90099	NUT	2				
10	27	43008	6 GASKET	1			1	
11		42966	4 EXHAUST TUBE	1				
12	10	40011151	SCREW	6				
13		42962	SEAL-EXHAUST TUBE	1				
14	25	89417	1 GROMMET	1				
15	32	824660	1 WATER TUBE	1	(LONG)			
15	32	824660	2 WATER TUBE	1	(X-LONG)			
16		824661	CLAMP	1				
17		814080	SEAL (UPPER)	1				
18	10	40107 50	SCREW (M8 X 50)	2				
19		42953A	5 BRACKET ASSEMBLY (LOWER)	1	(BLACK)			
19		42953A	6 BRACKET ASSEMBLY (LOWER)	1	(GRAY)			
19		42953A	7 BRACKET ASSEMBLY (LOWER)	1	(TRACKER-GRAPHITE GRAY)			
20		43405	SEAL	1				
21	25	12602	1 GROMMET	1	(S/#-0G359967 & BELOW)			
22	25	19565	GROMMET	1	(S/#-0G359968 & UP)			
23	10	817427 50	SCREW (M8 X 50)	3				
24	23	48237	BUSHING	1				
25		79932A	19 SHIFT SHAFT (UPPER)	1	(USA-0G590000/BEL-9973100 & I	3		
26		42912A	3 SHIFT LINK	1			3	
25		79932A	9 SHIFT SHAFT (UPPER)	1	(USA-0G589999/BEL-9973099 & I			
26		42912A	1 SHIFT LINK	1				
27	23	48475	BUSHING	2				
28	11	826833	6 NUT	1				
29	23	813745	SPACER	1	(LONG)			
29	23	11289	SPACER	1	(X-LONG)			
30		43585	COUPLING	1				
-	27	13461A90	GASKET SET	1				